





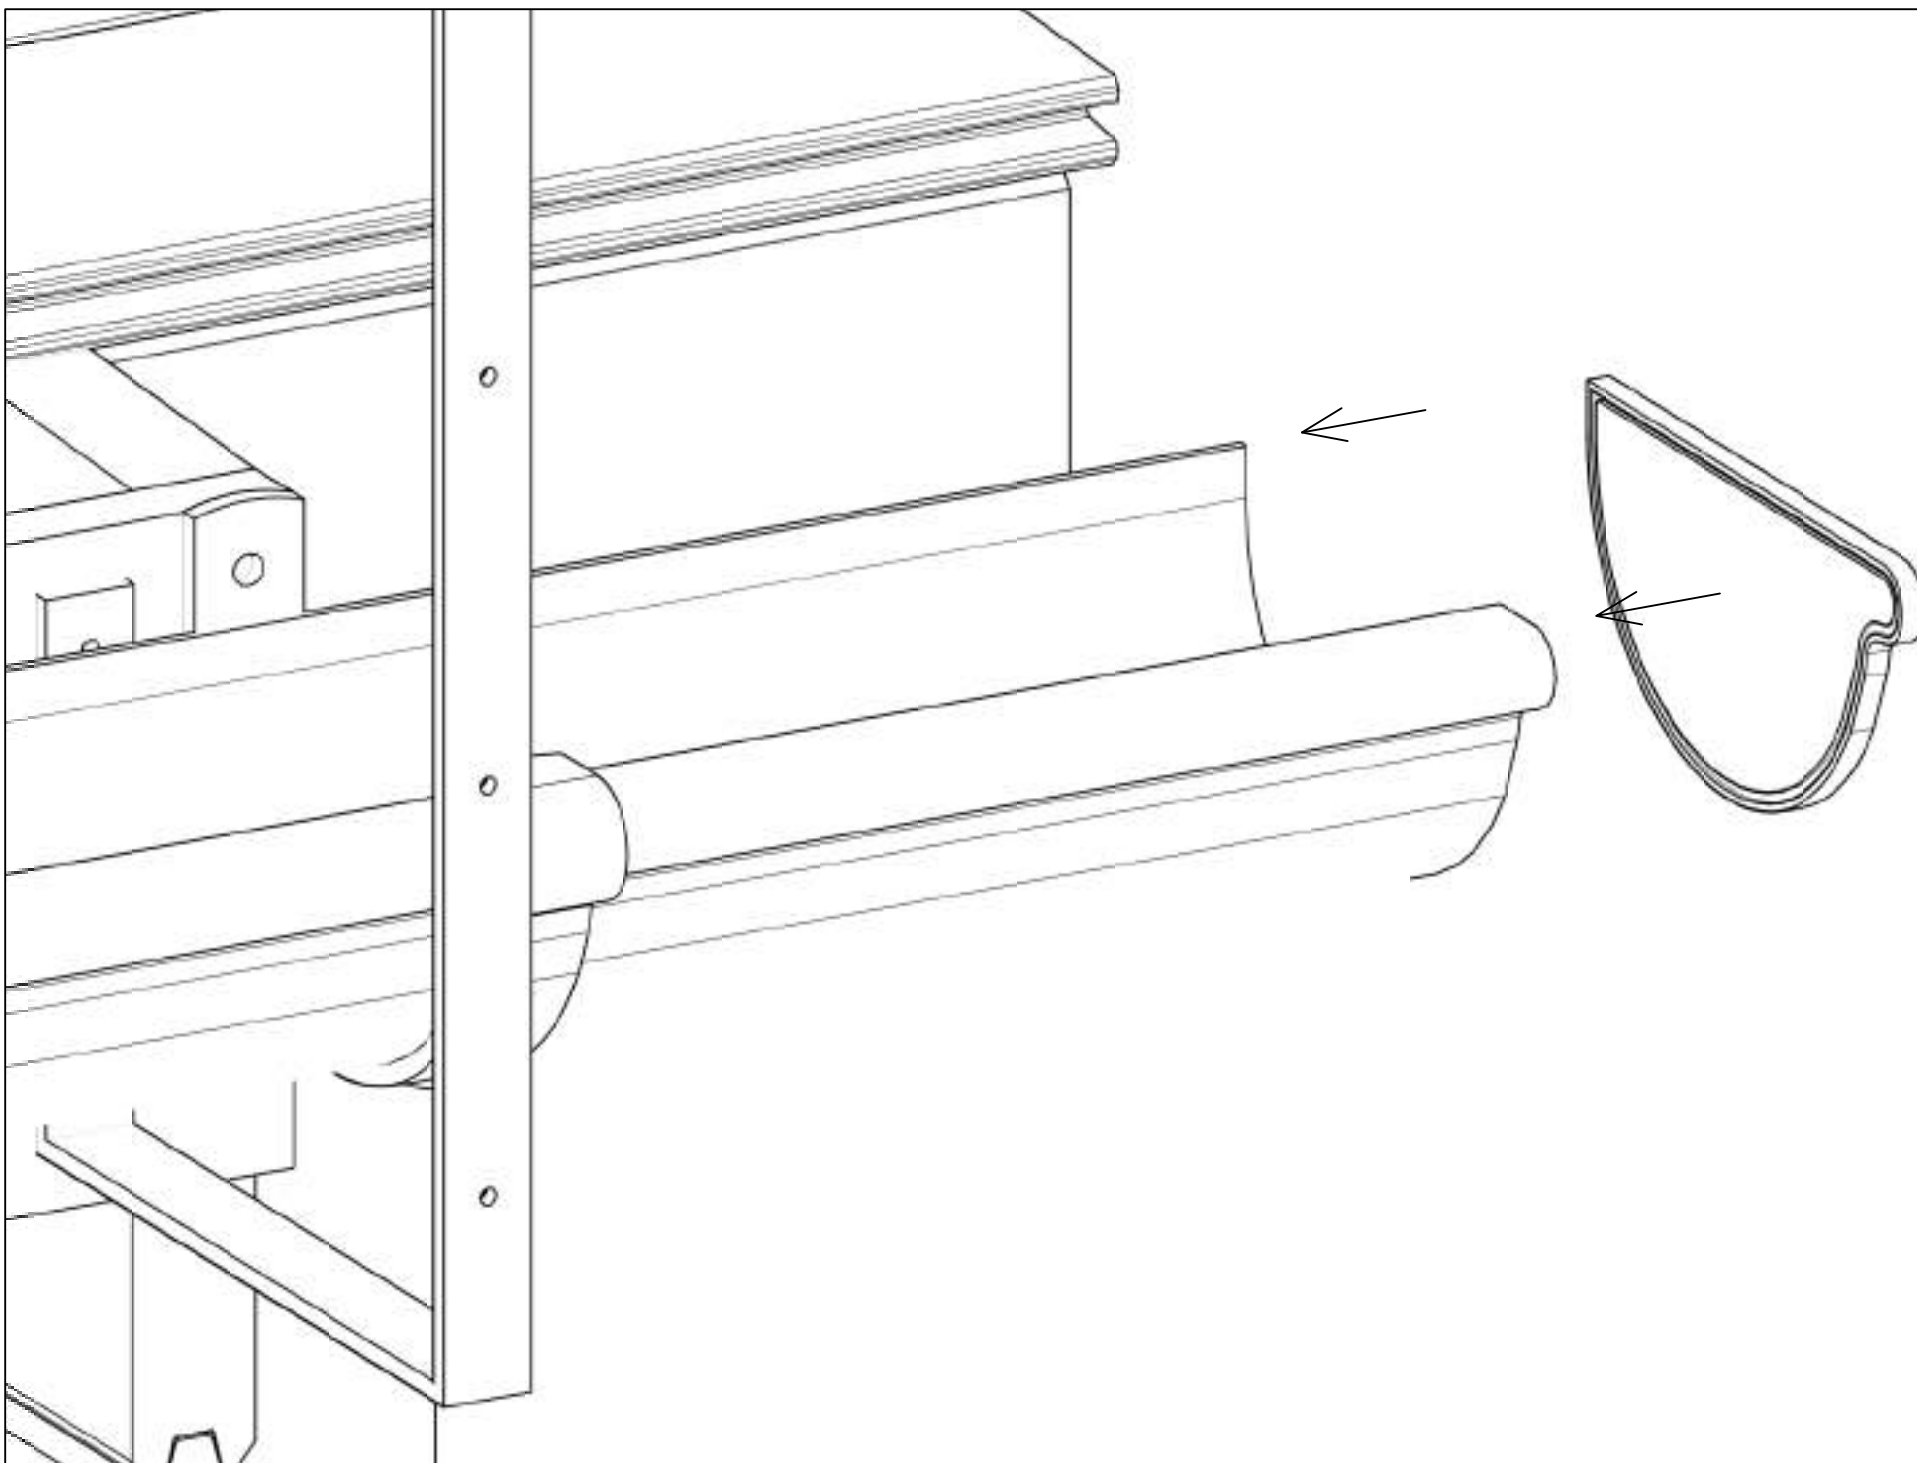

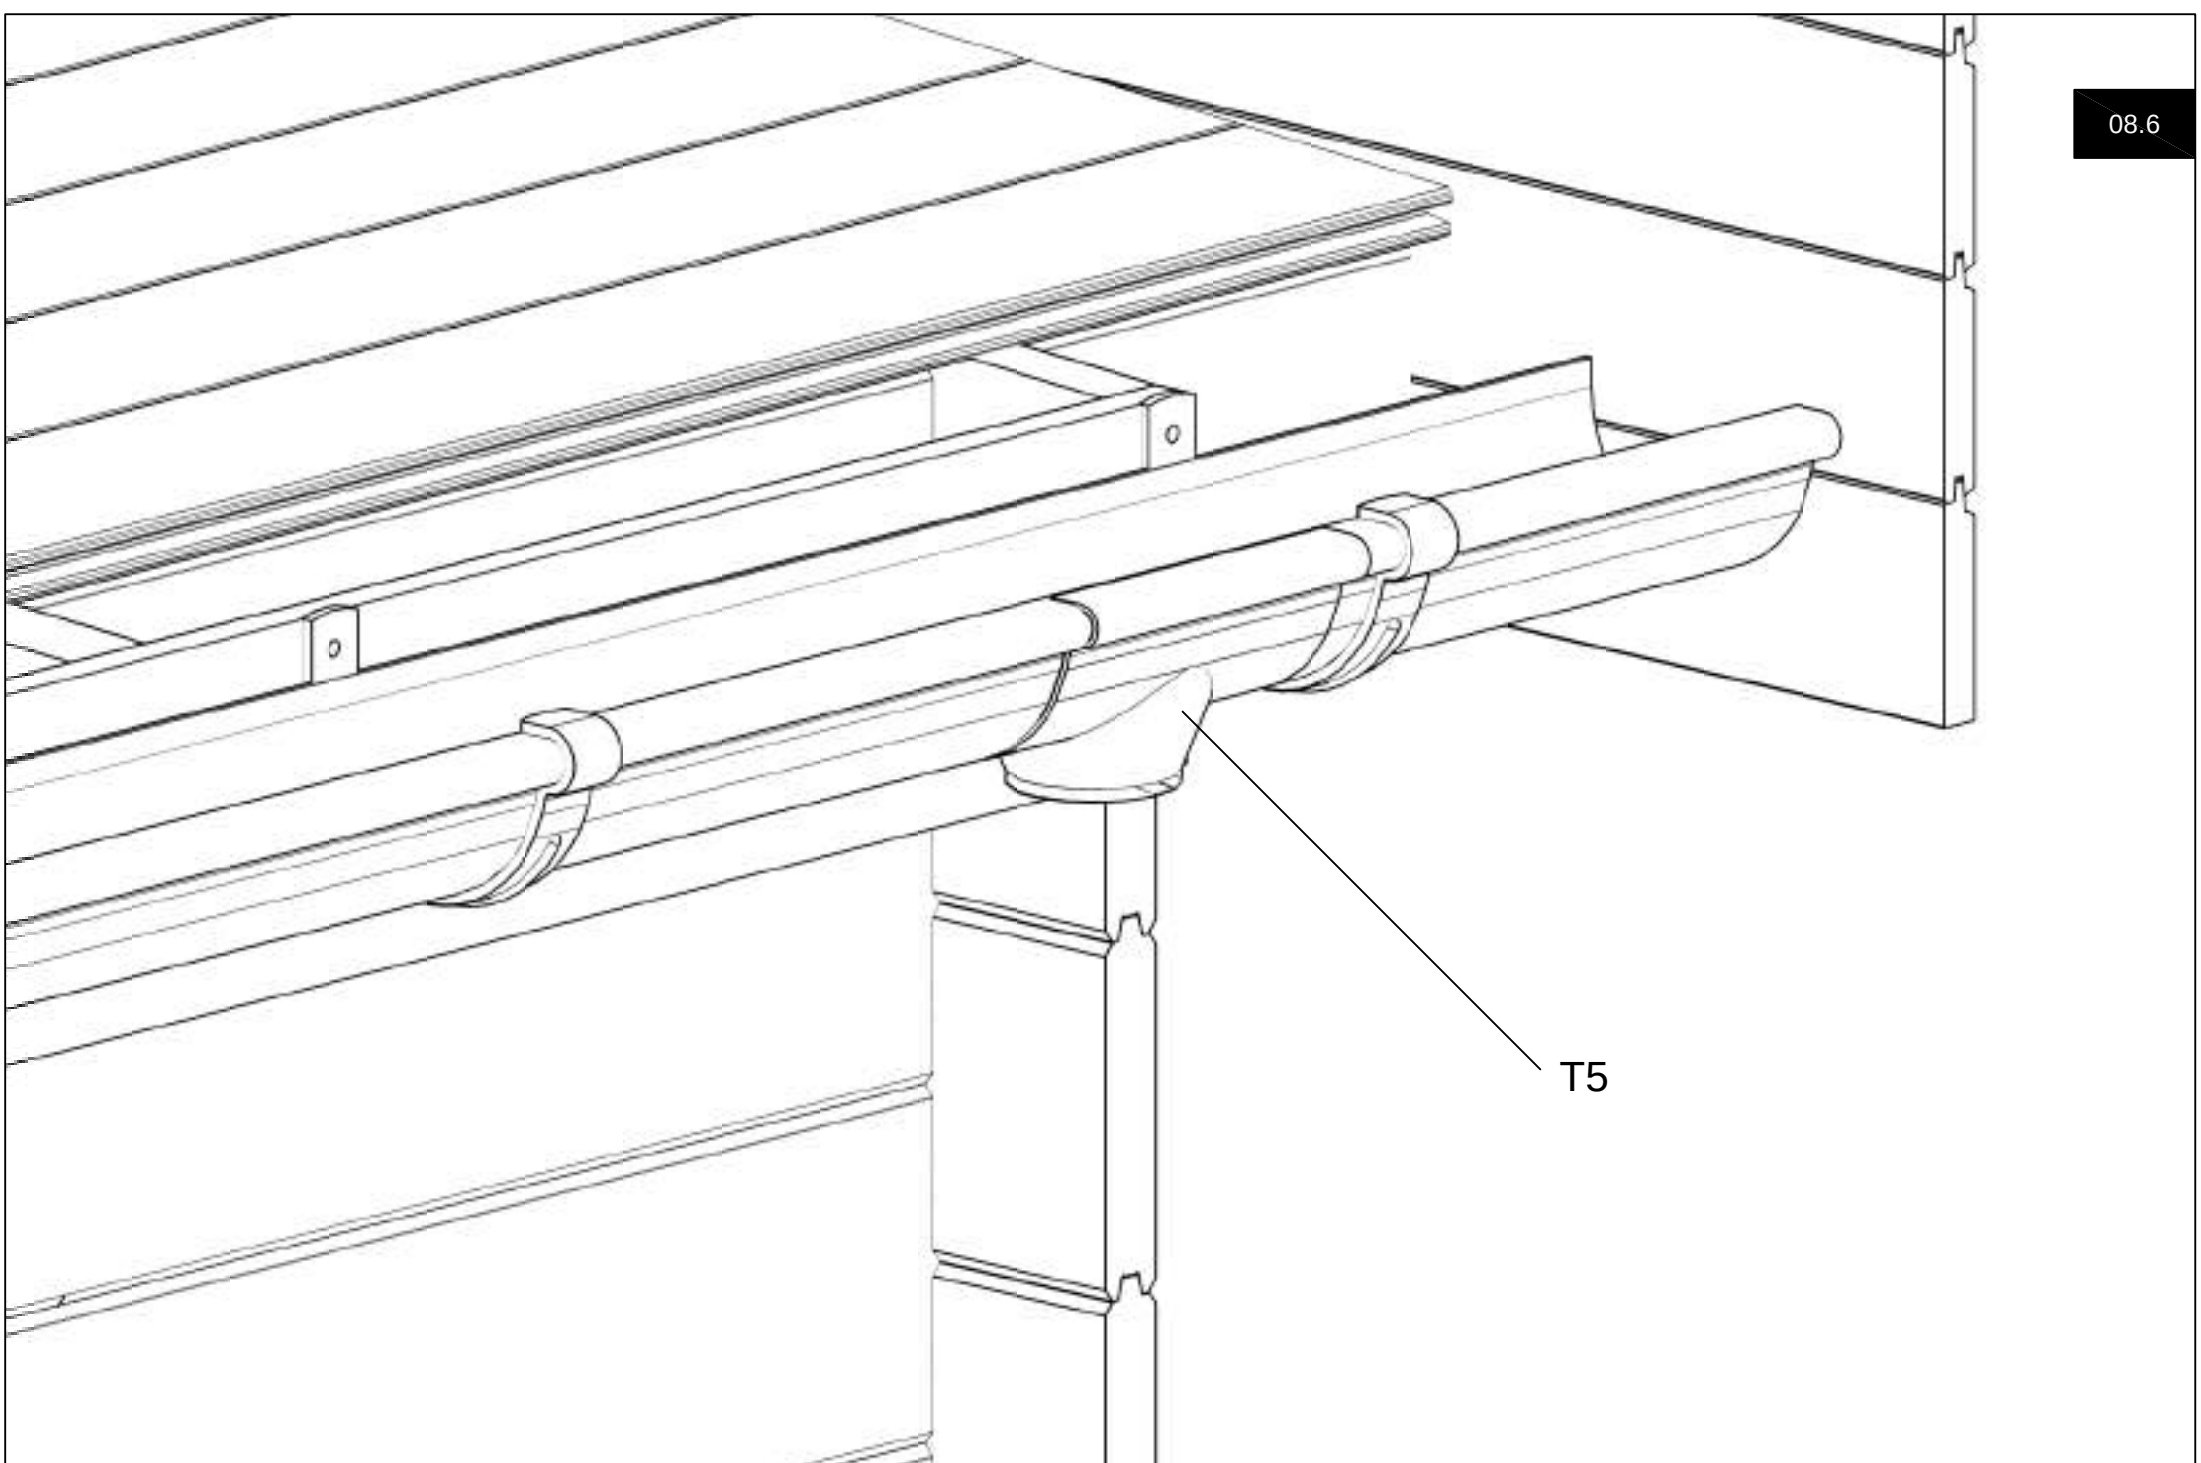


T5

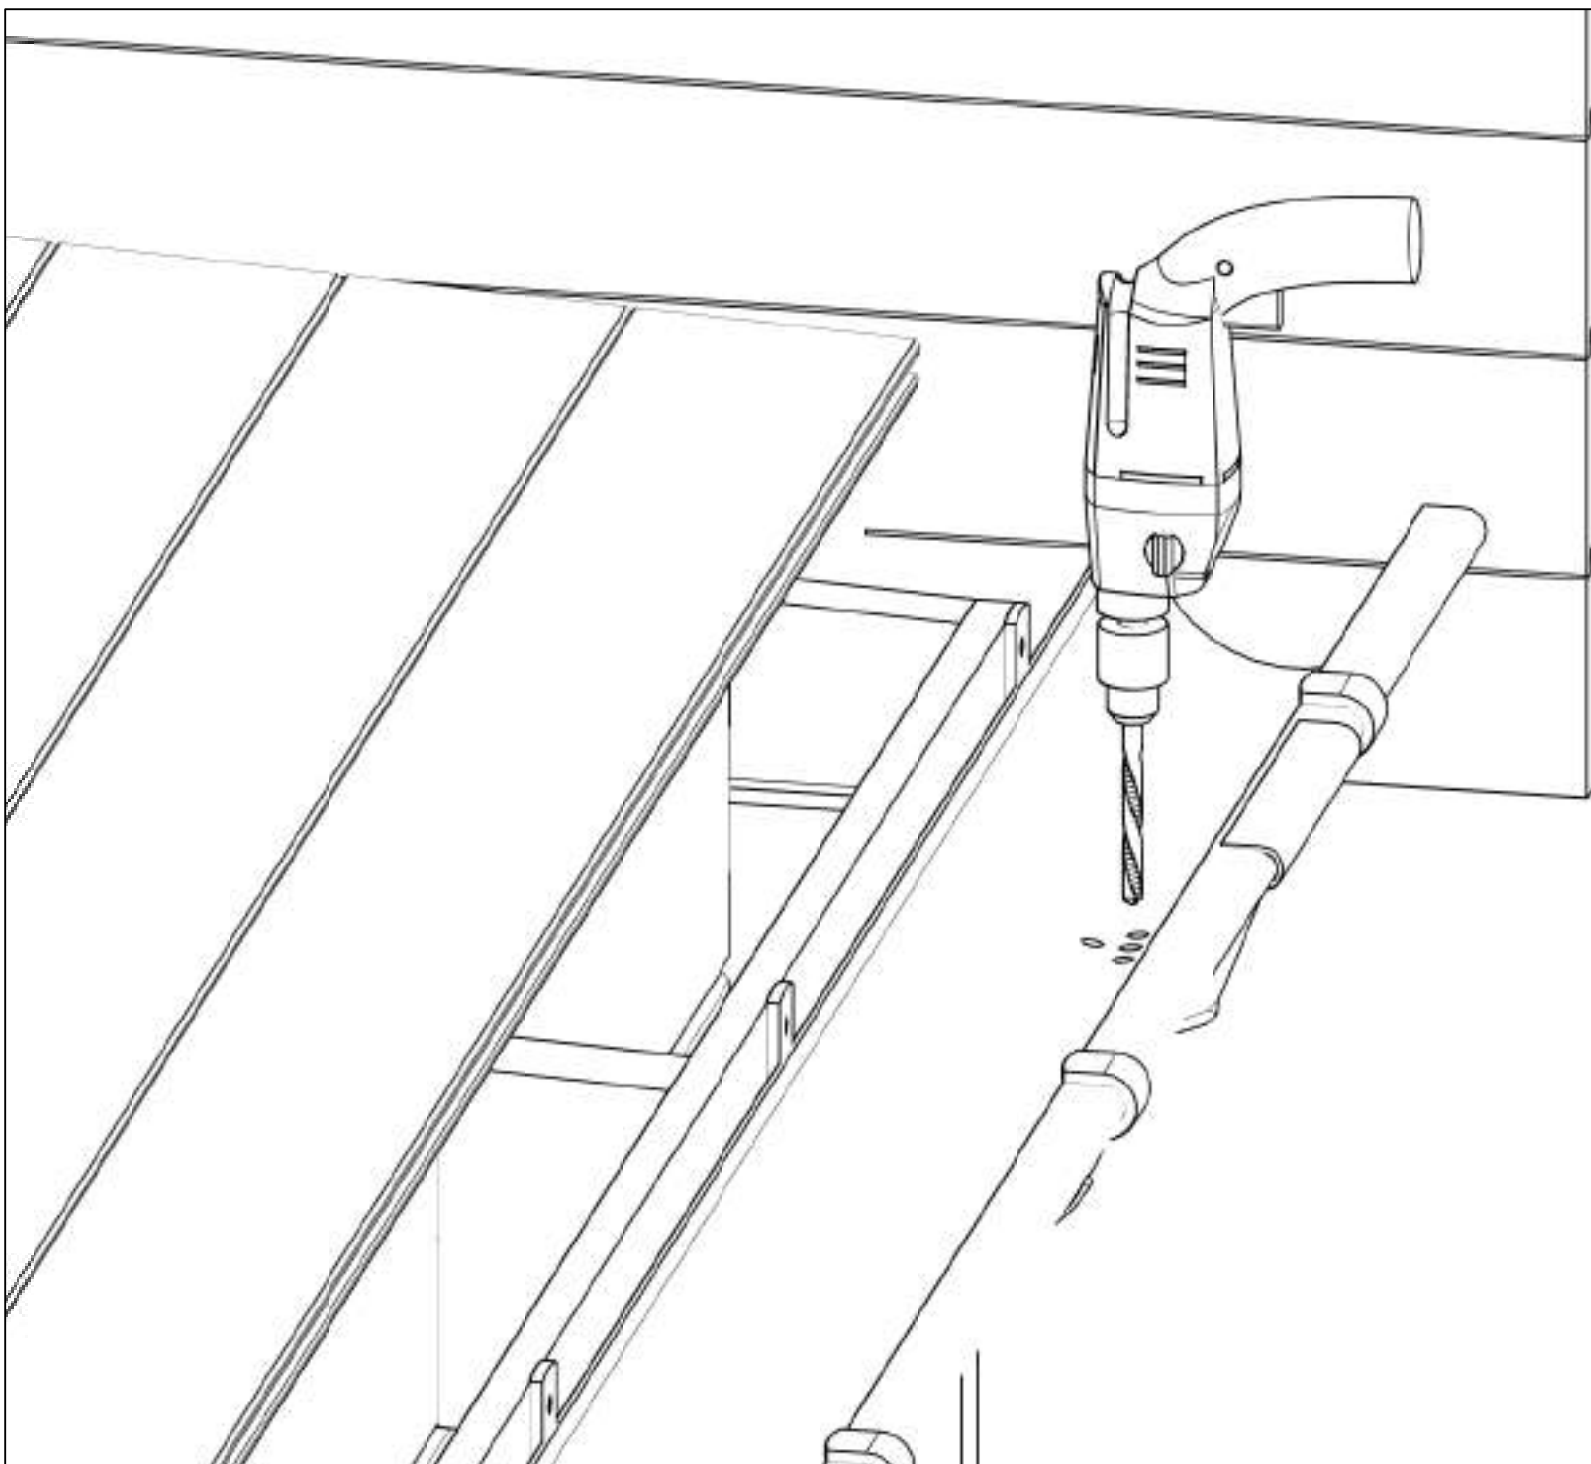

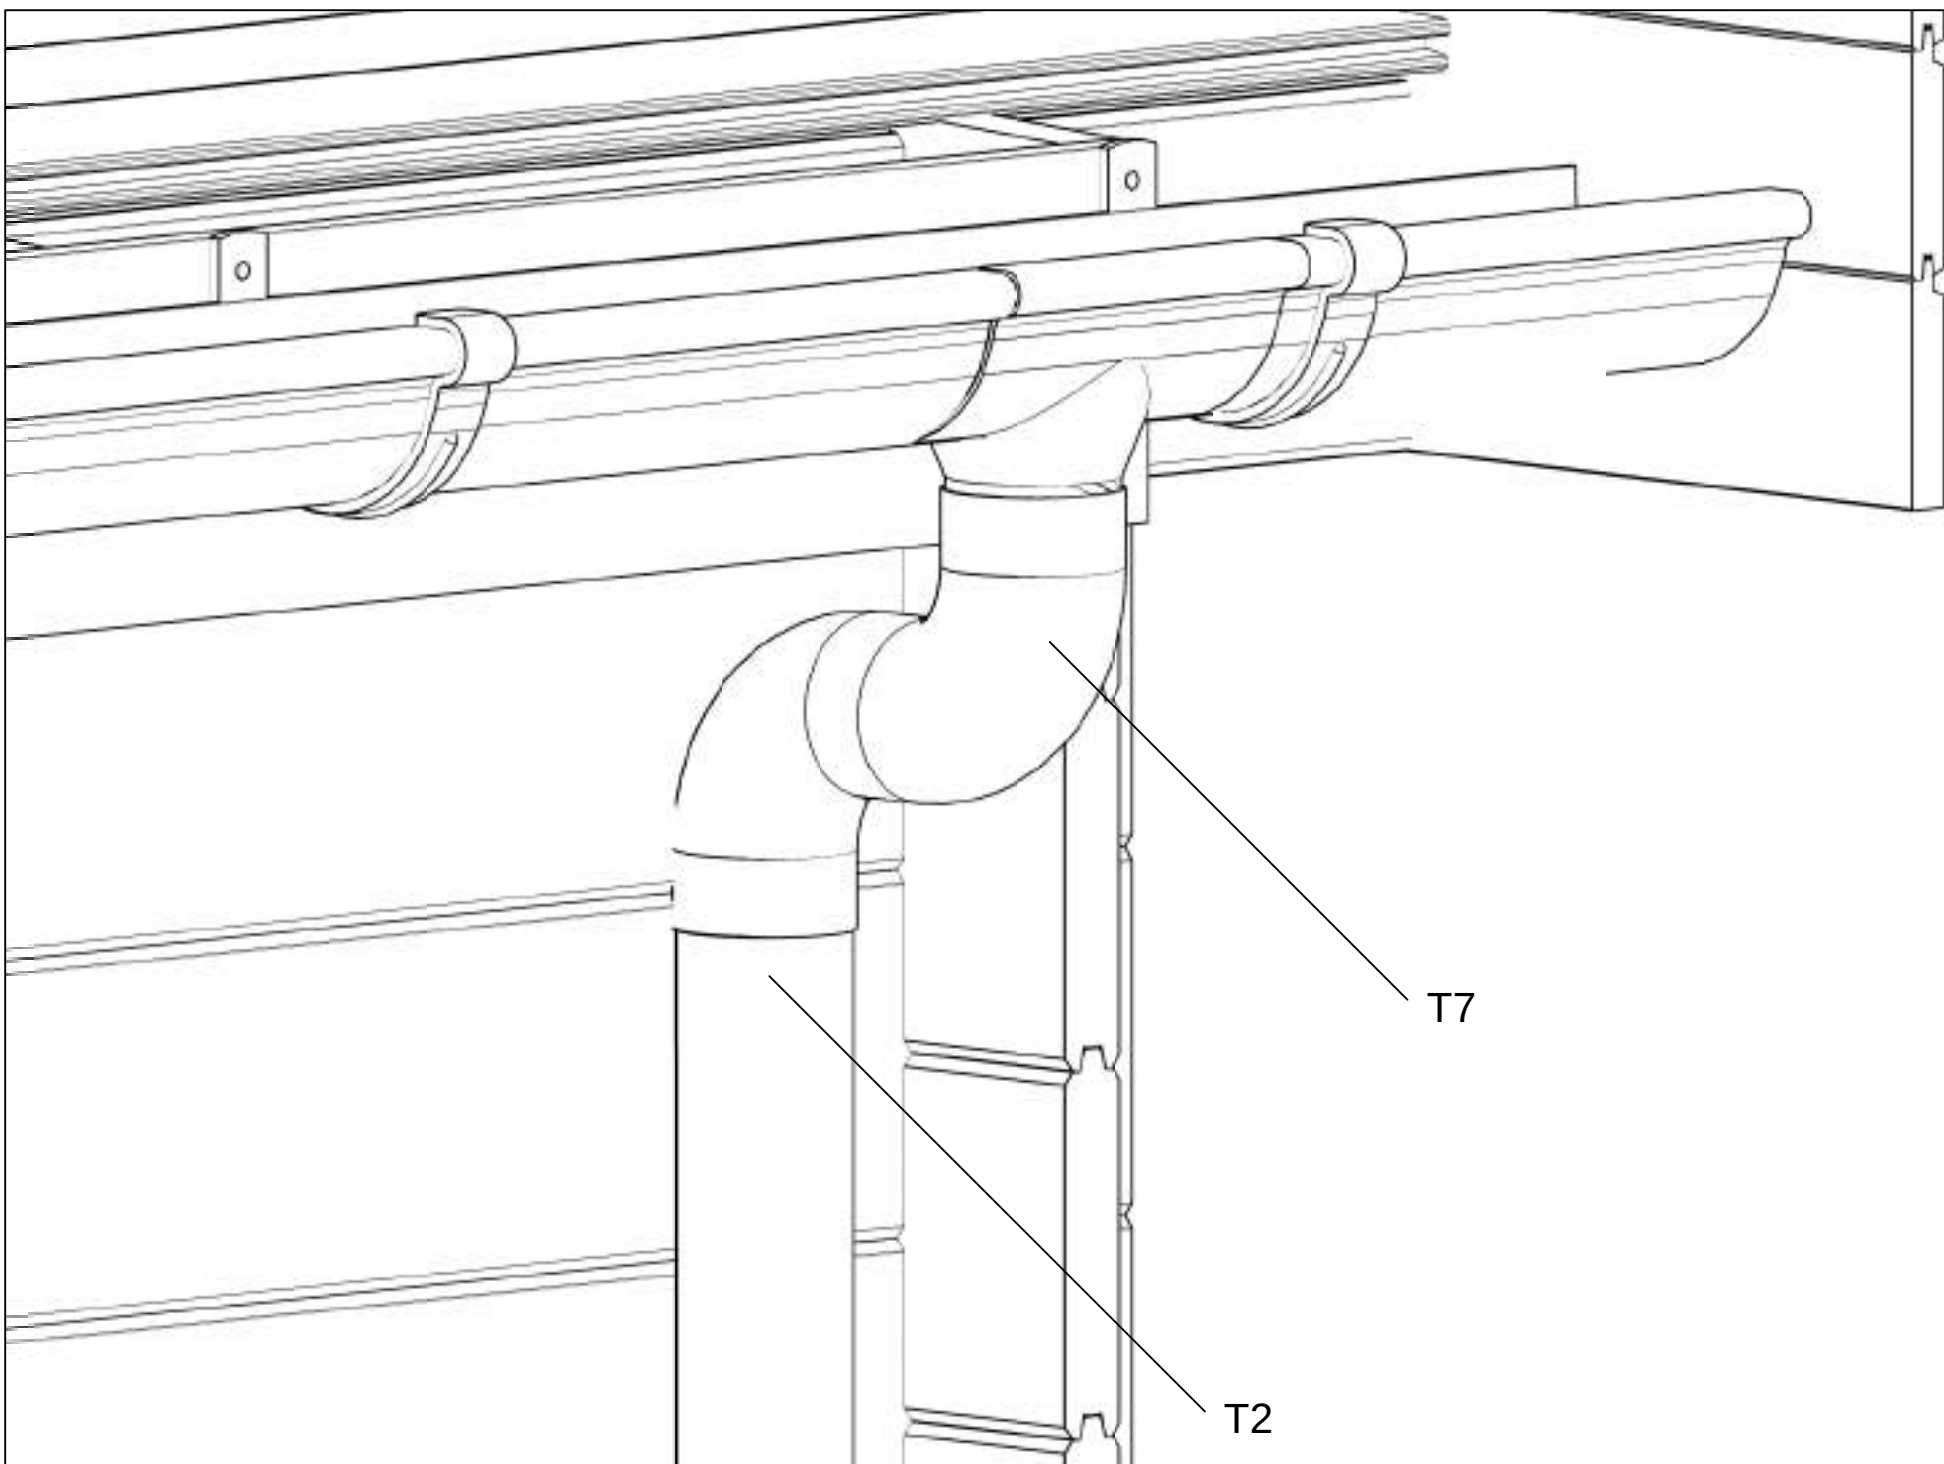


M1 = 1
M2 = 2
M3 = 1
R3 = 1 - #8

08.9

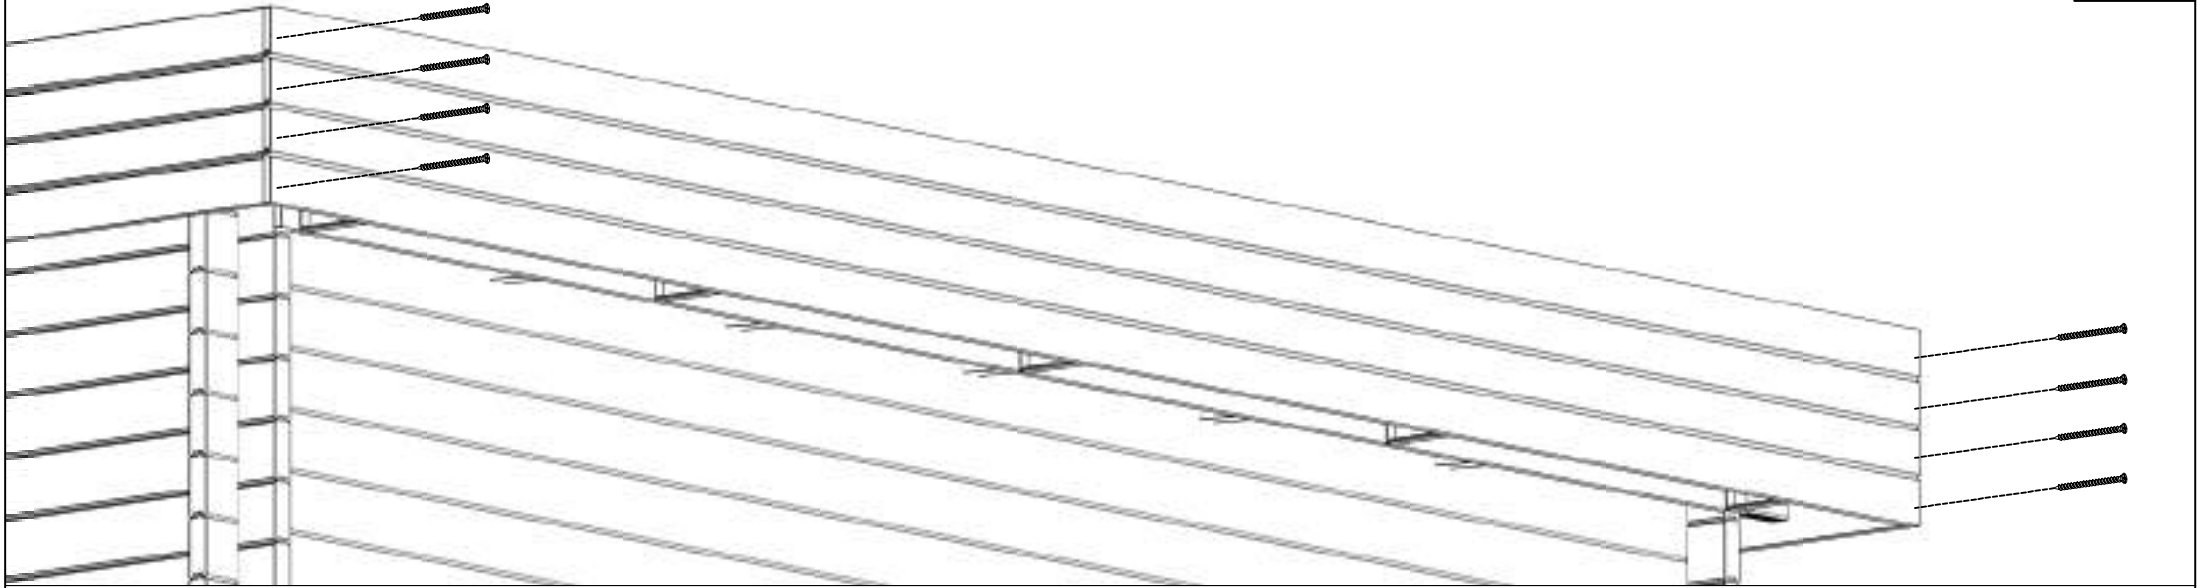


R5 = 1 - #16

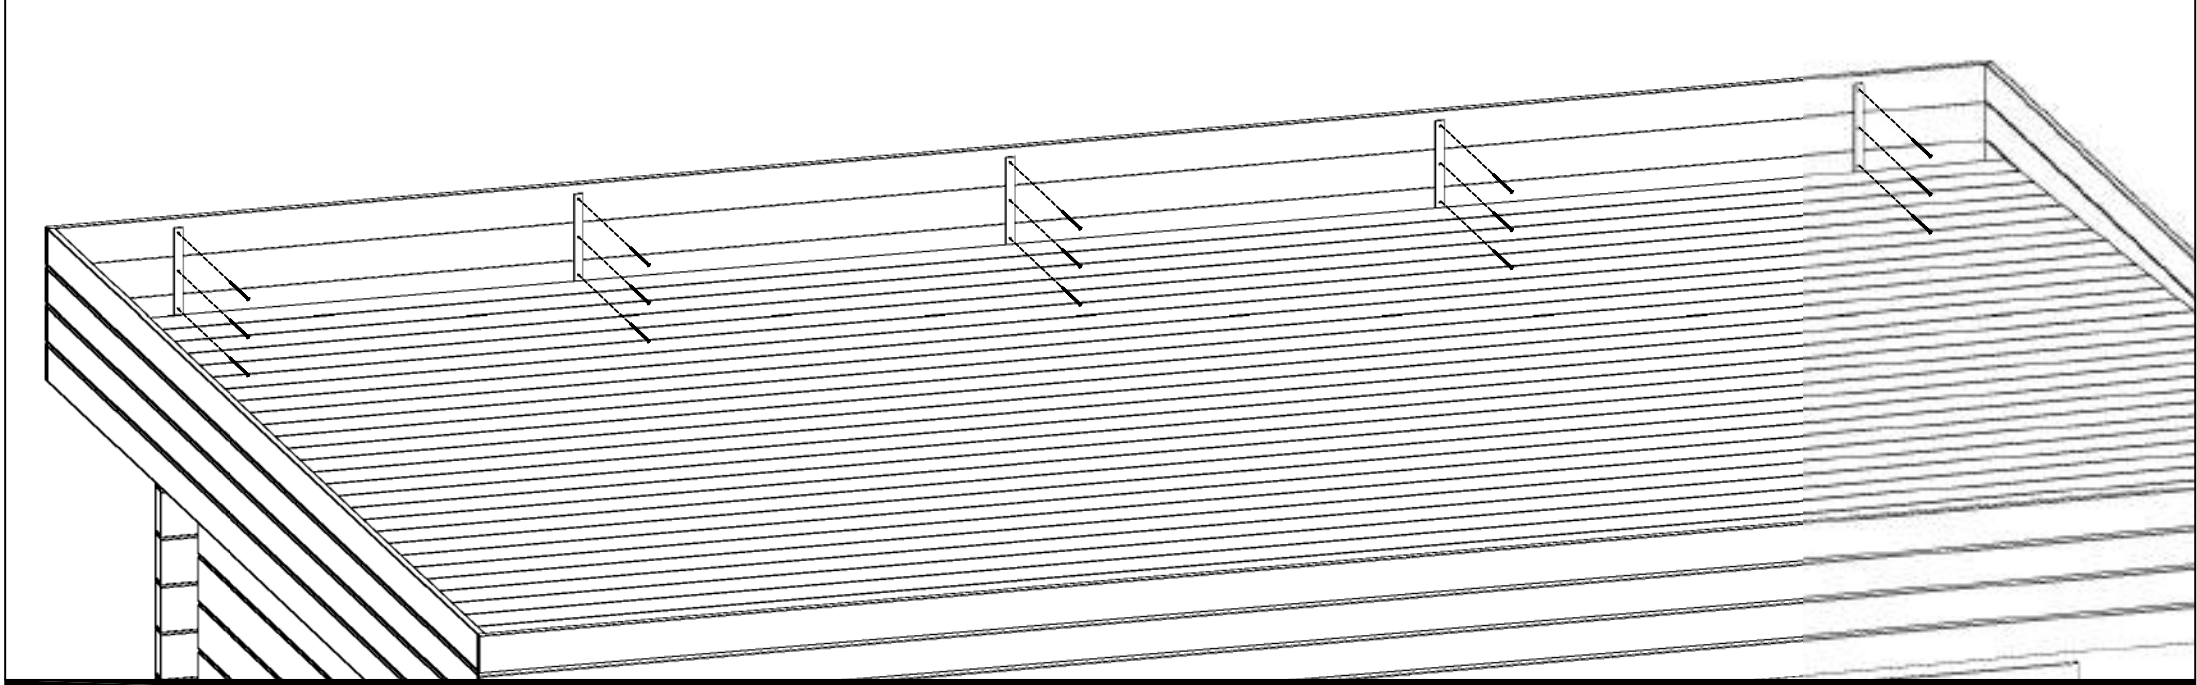

O = 1
R3 = 1 - #37

09

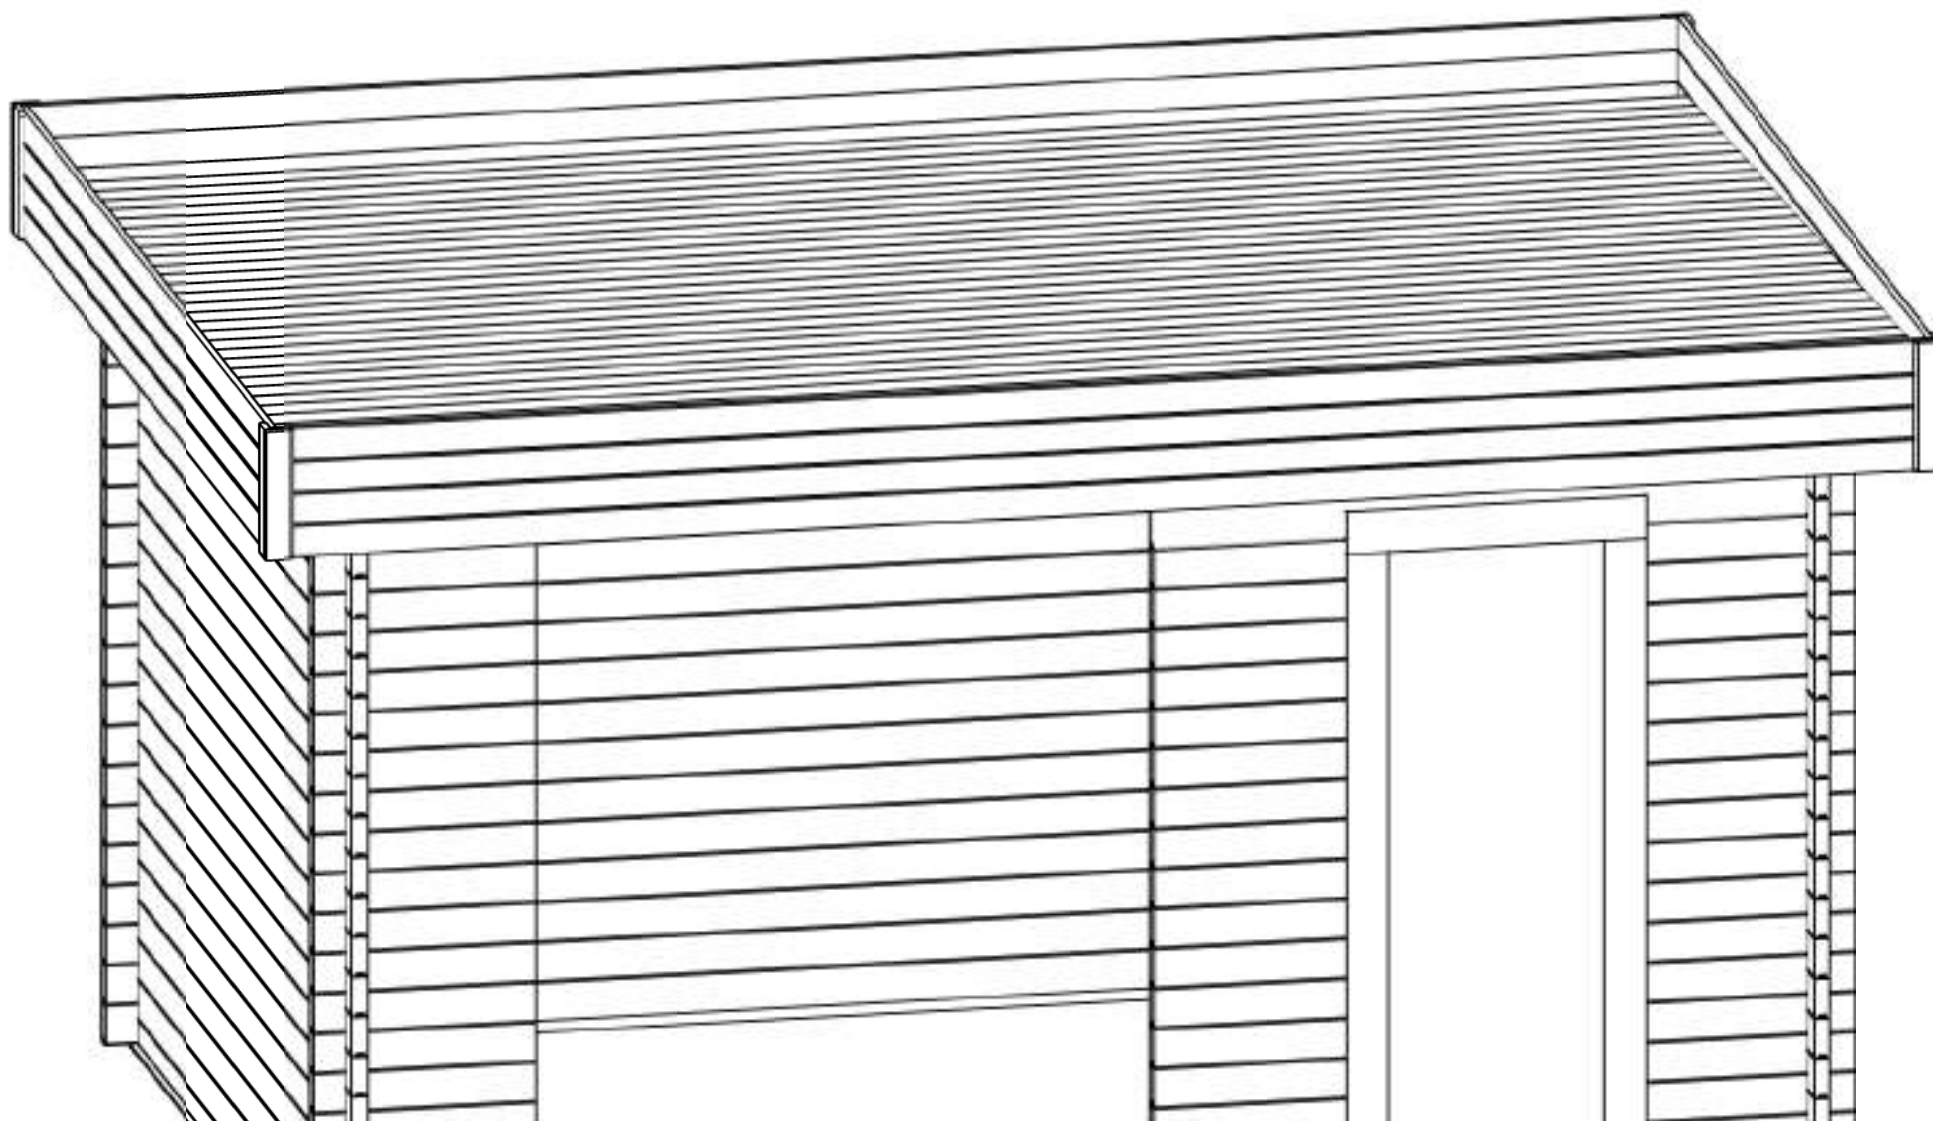


NOAM - E9641




SELECT
WOOD INSPIRATIONS

P = 1
R2 = 1 - #4

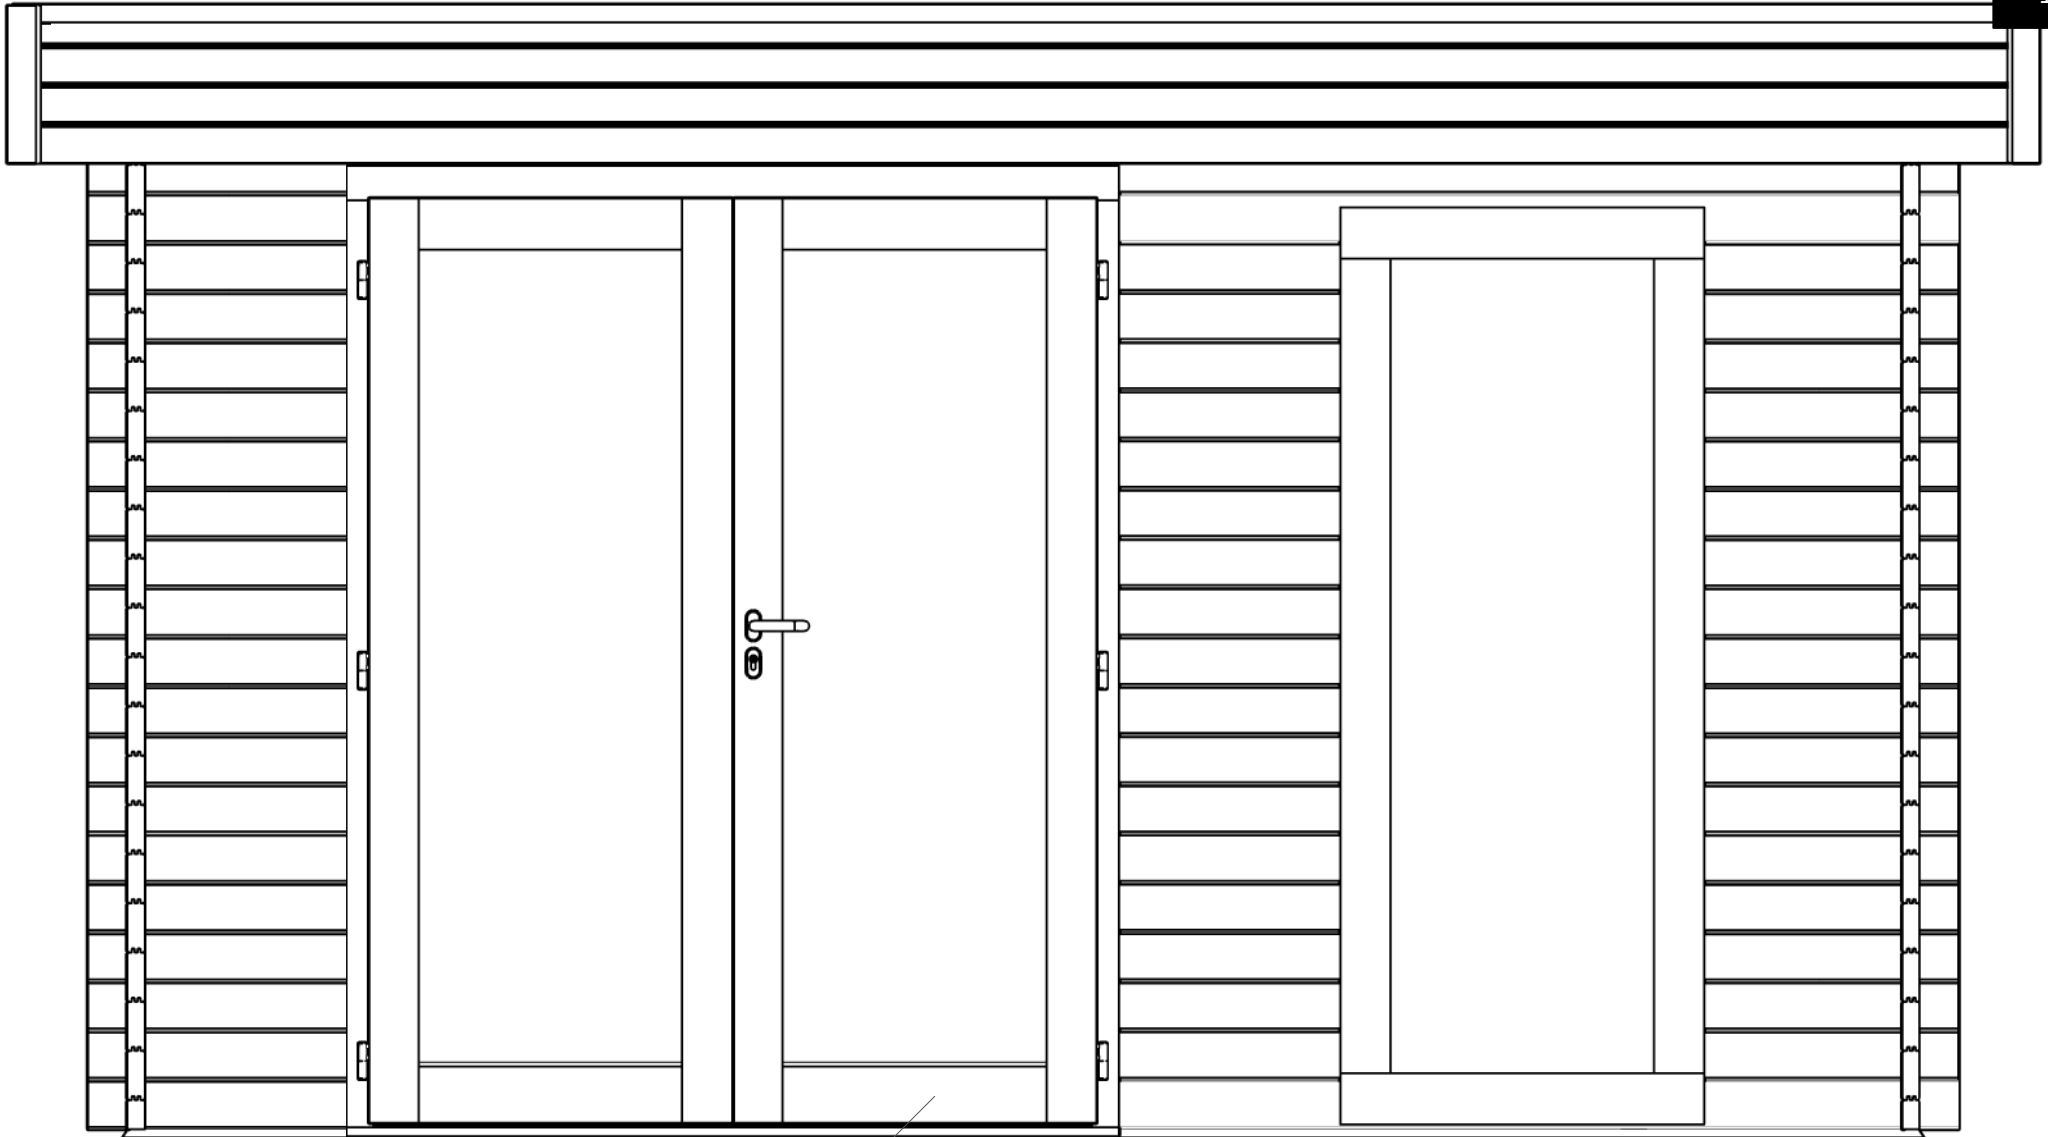


P




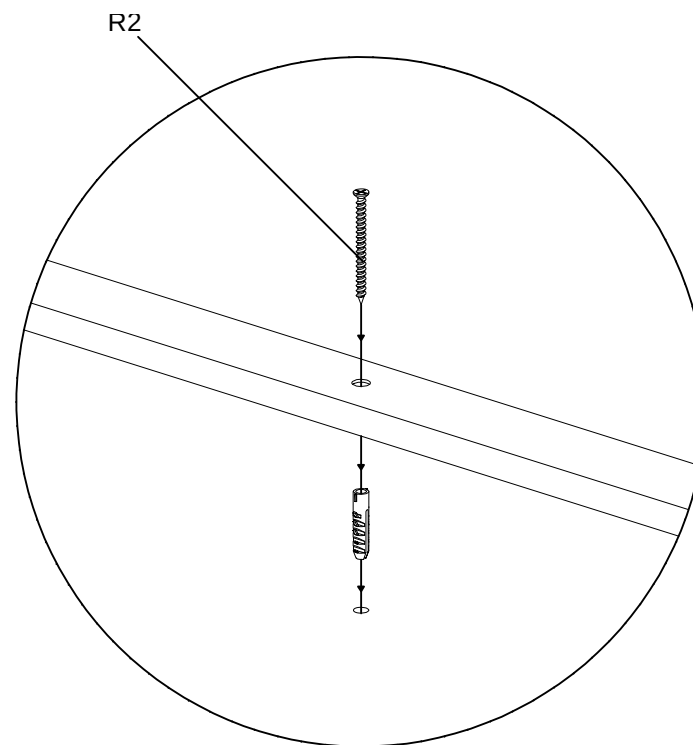



ALU PROFILE (E9901-ALU)




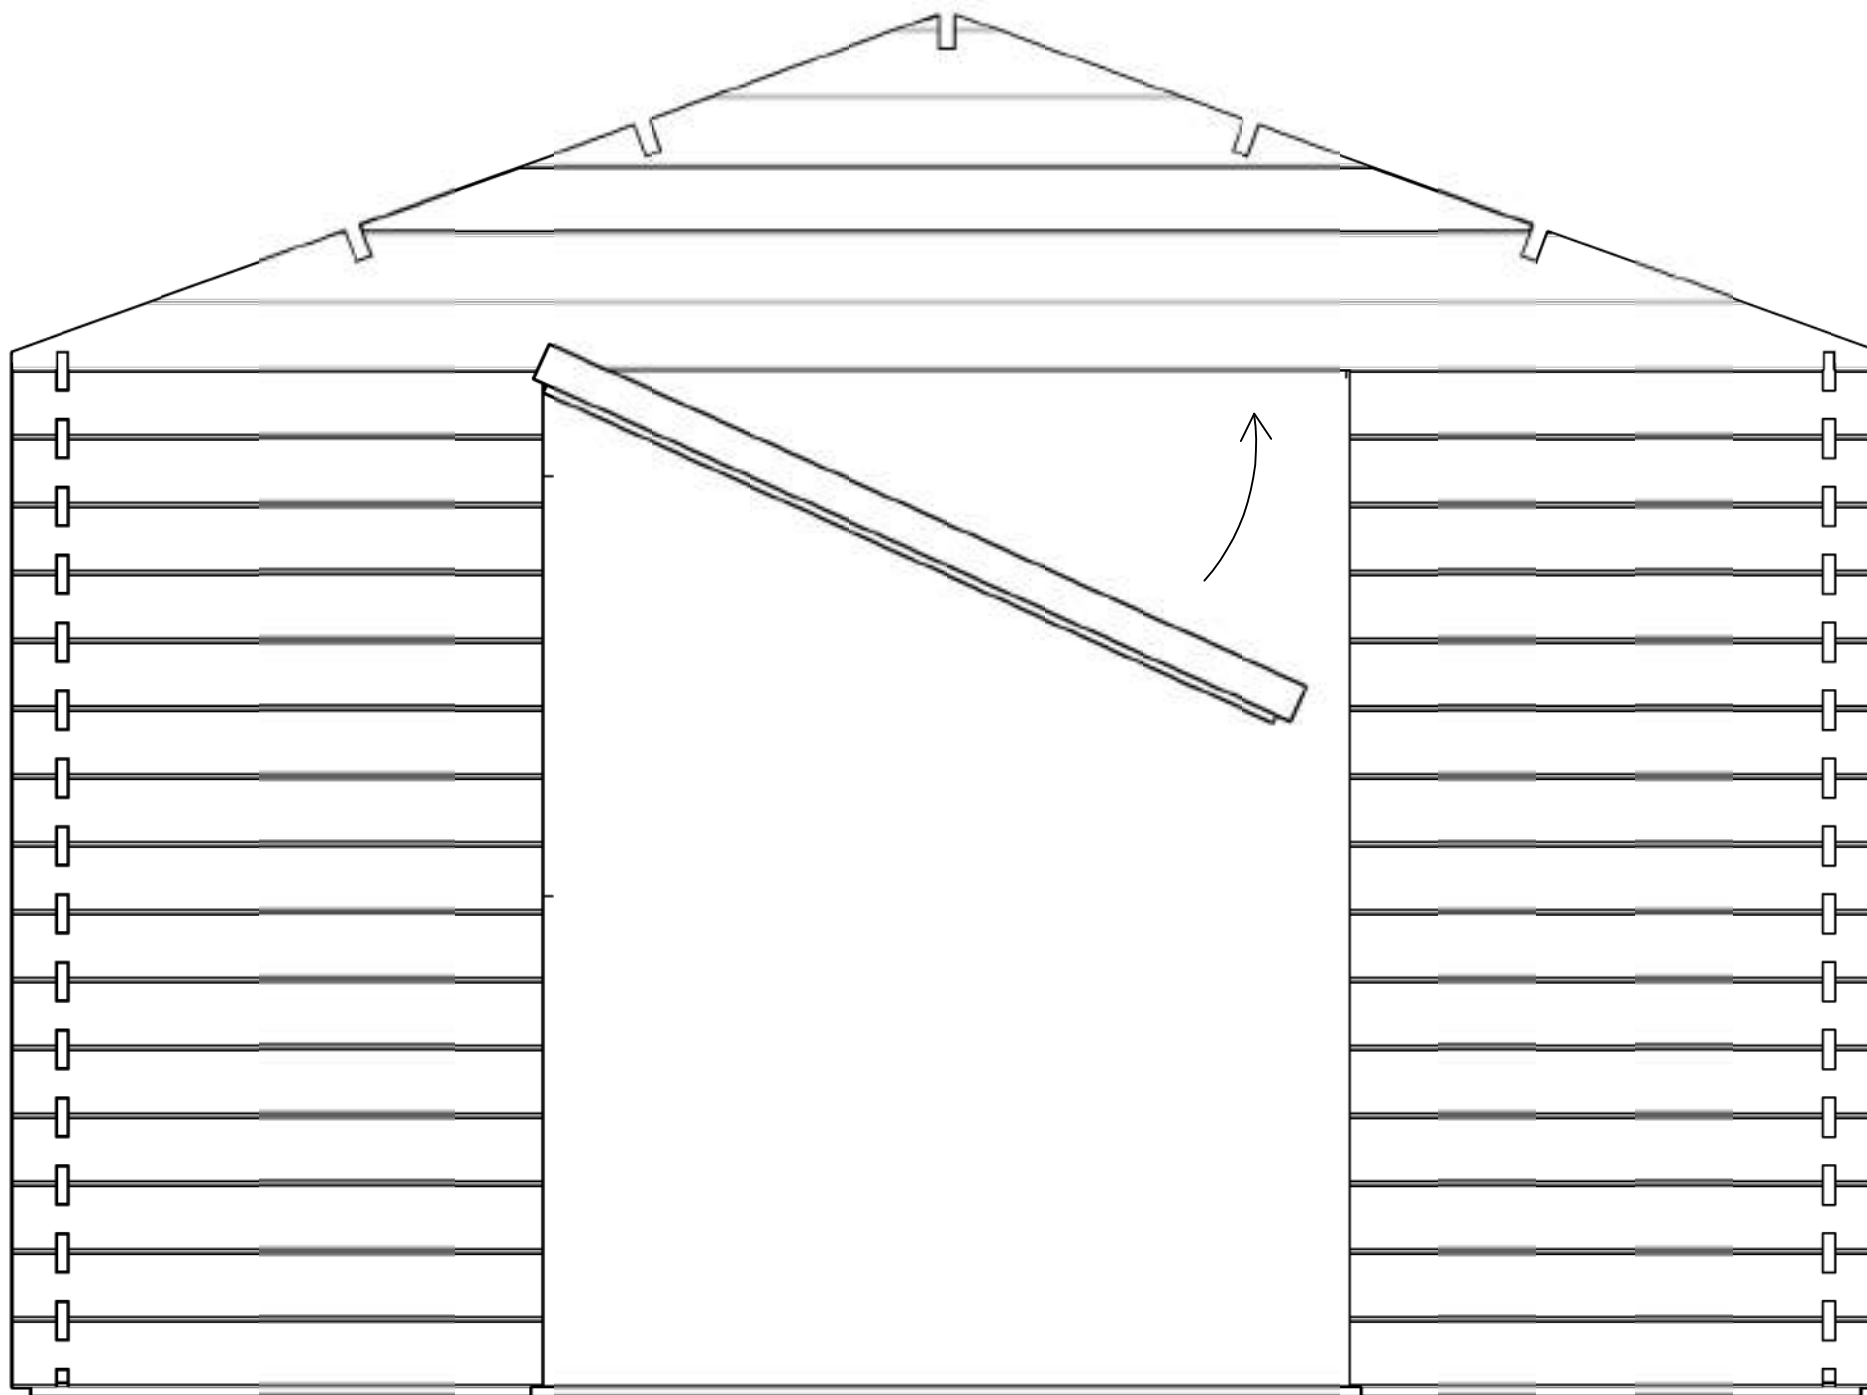


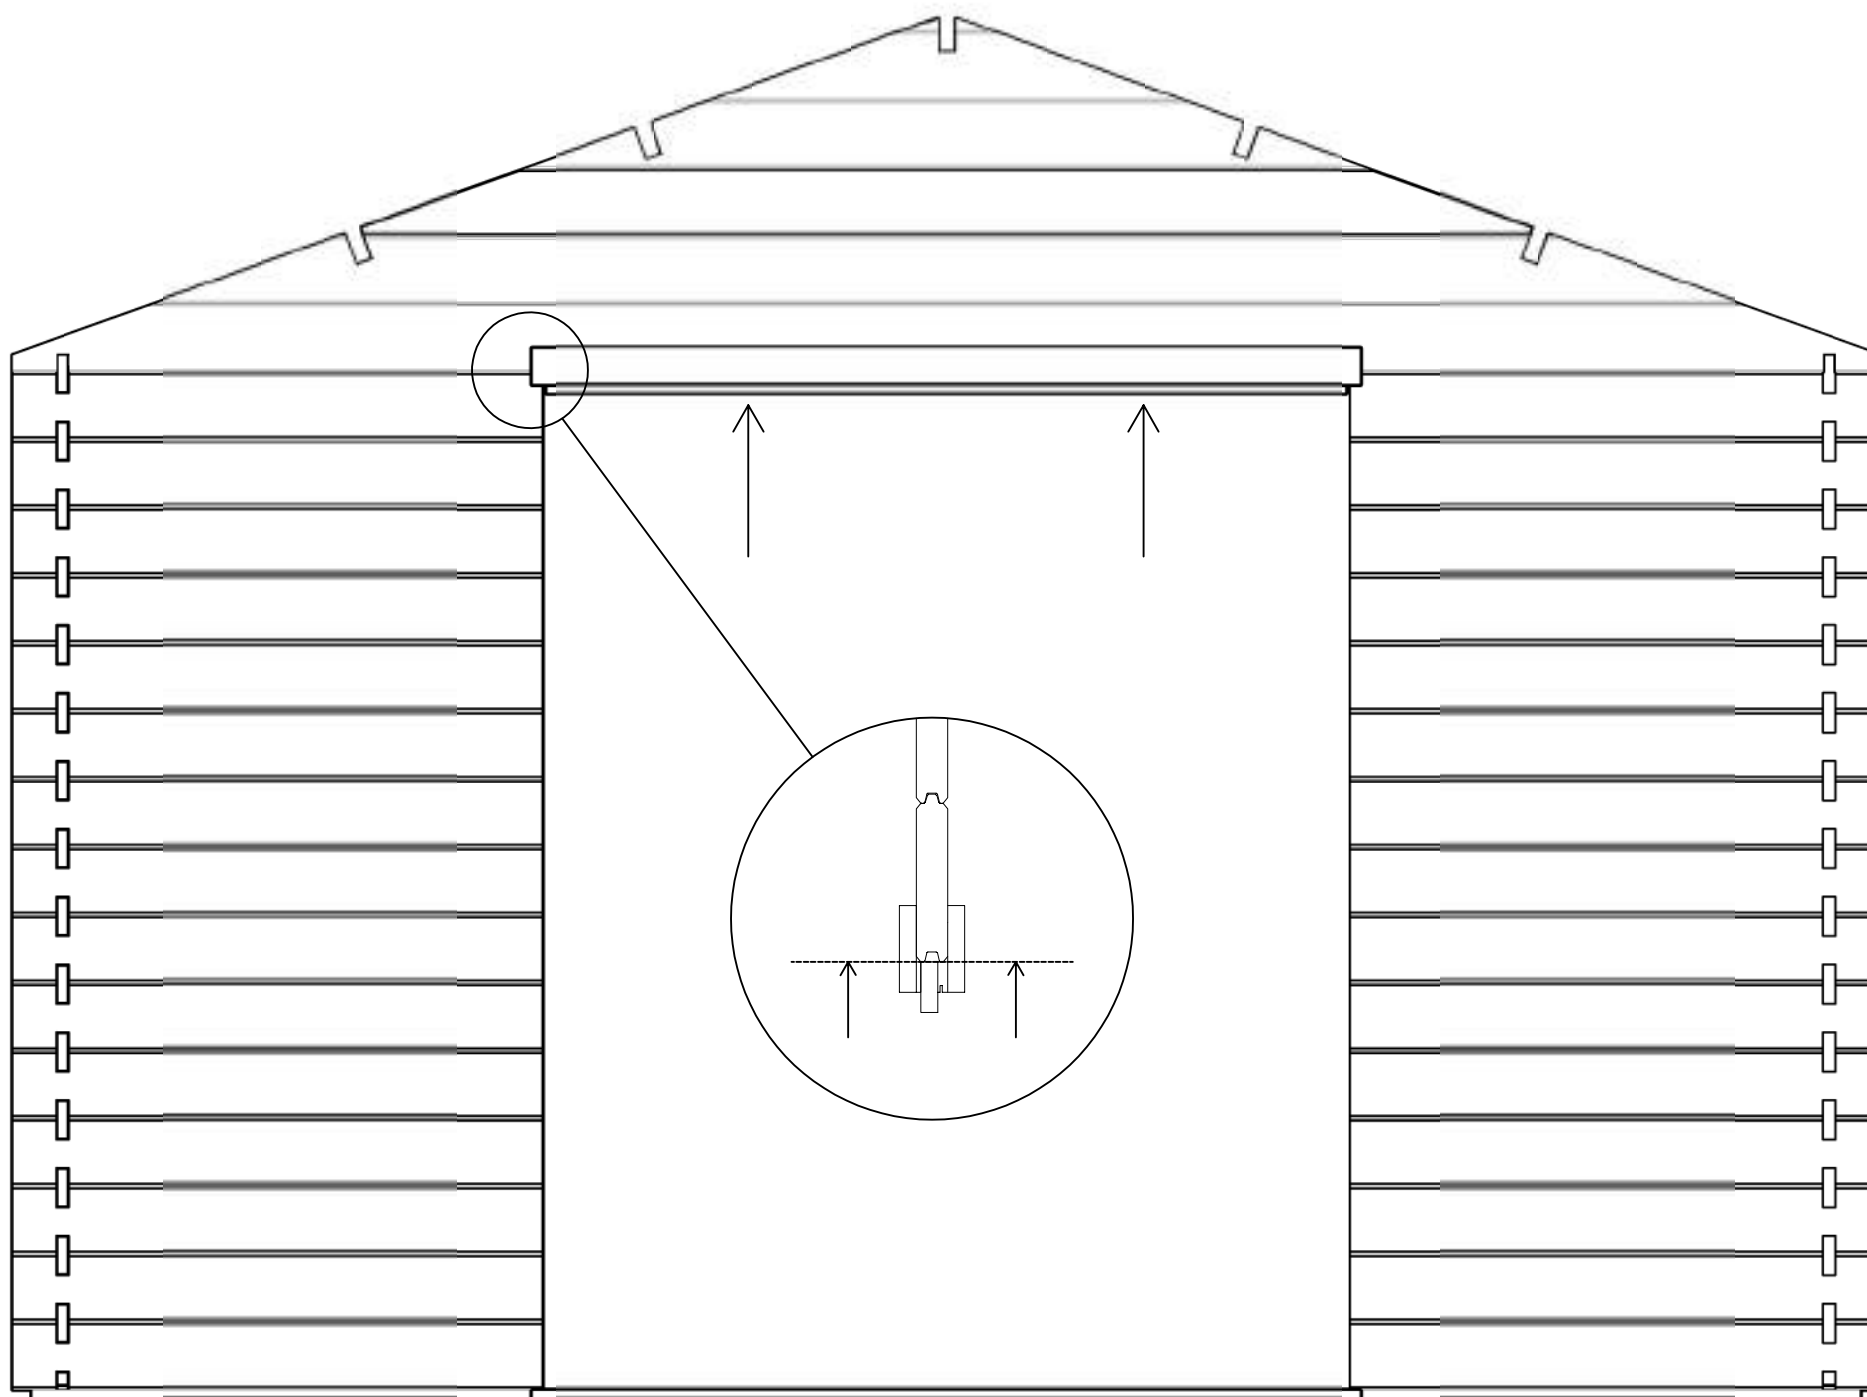







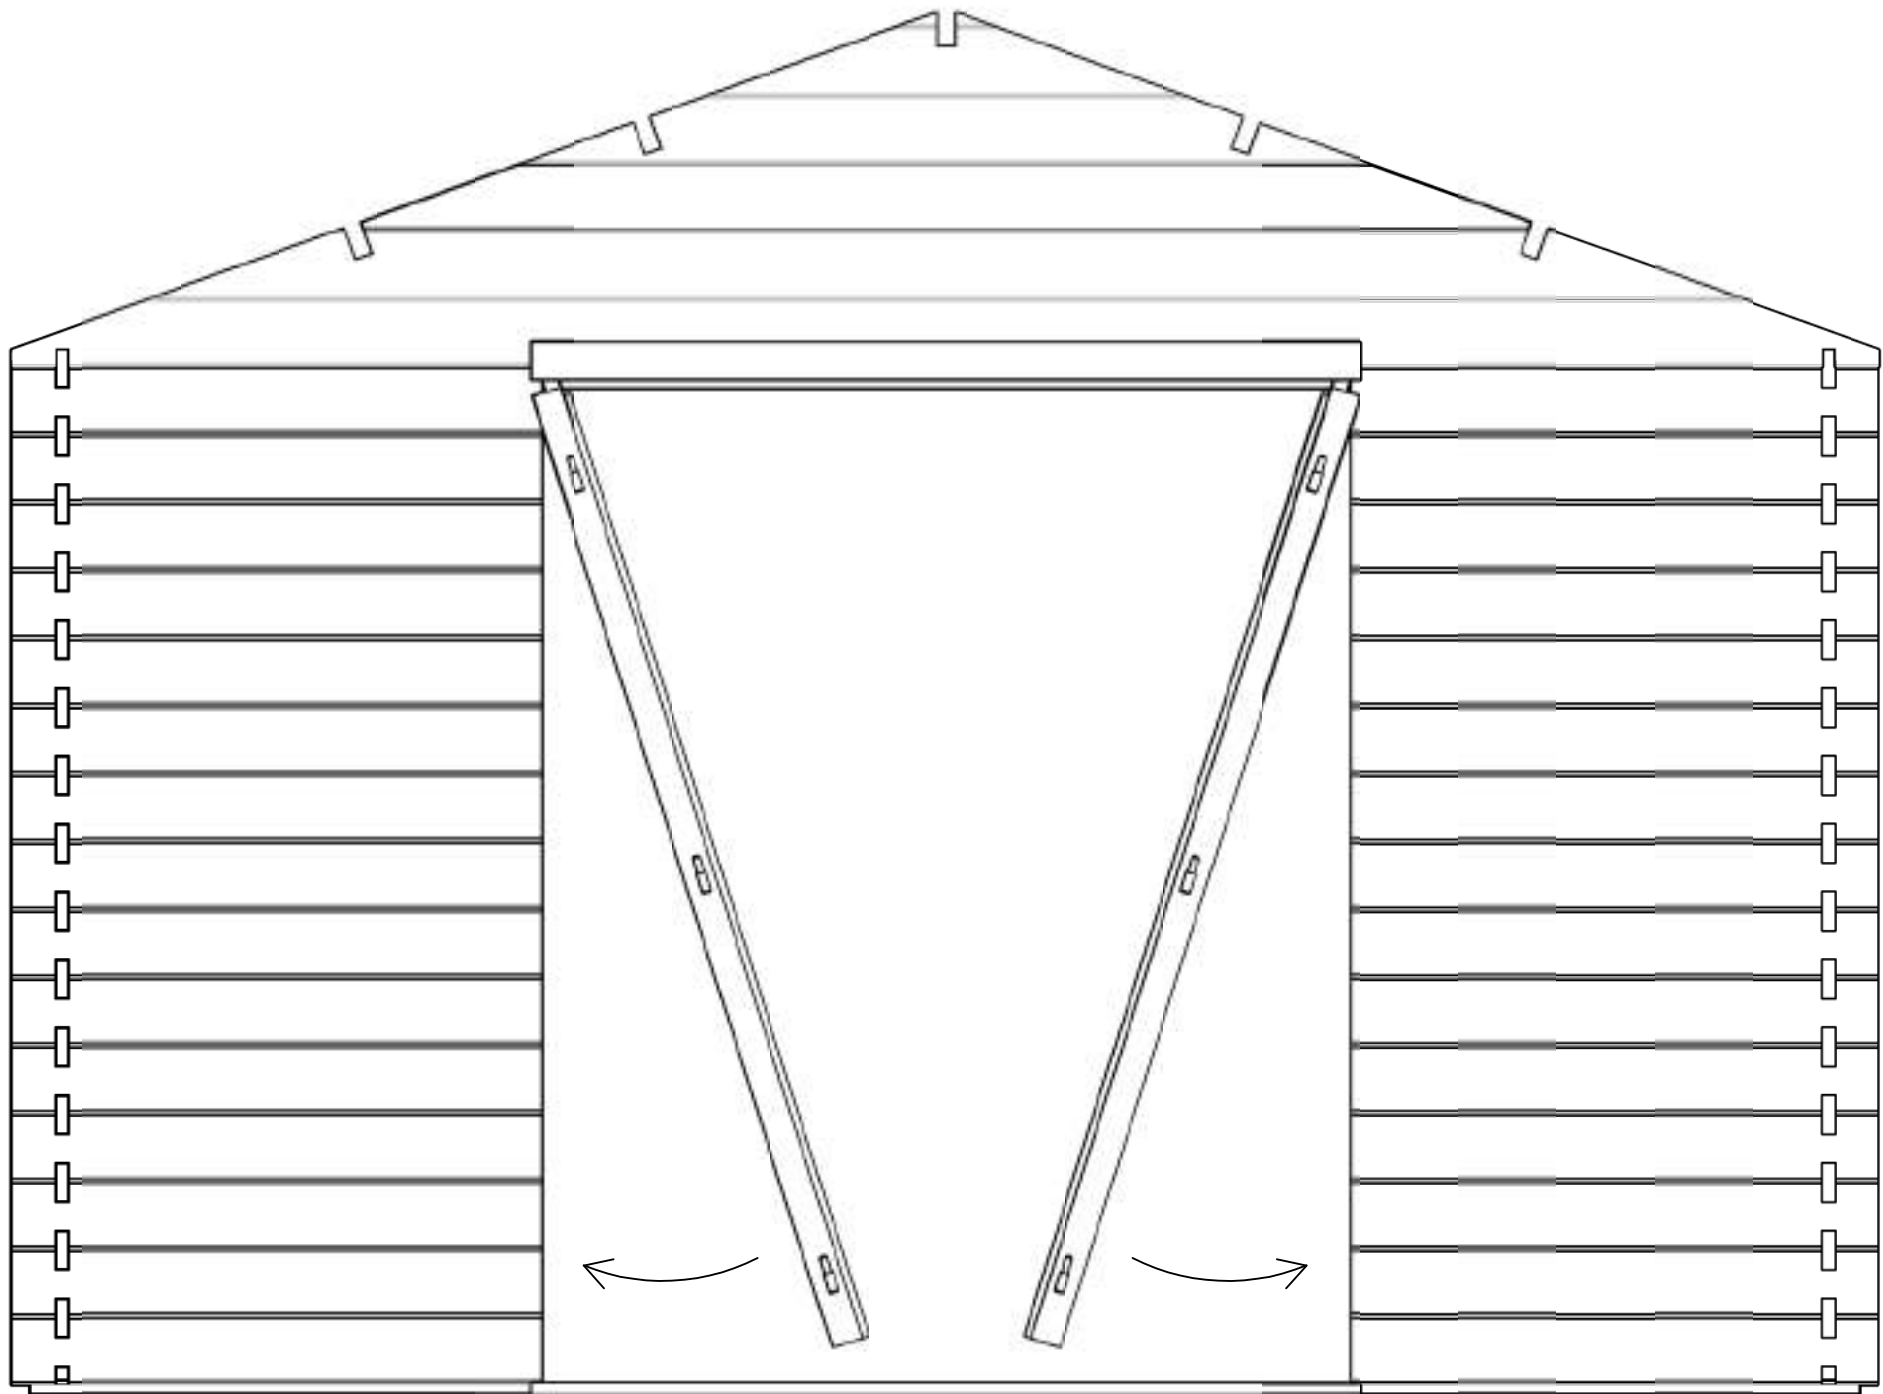


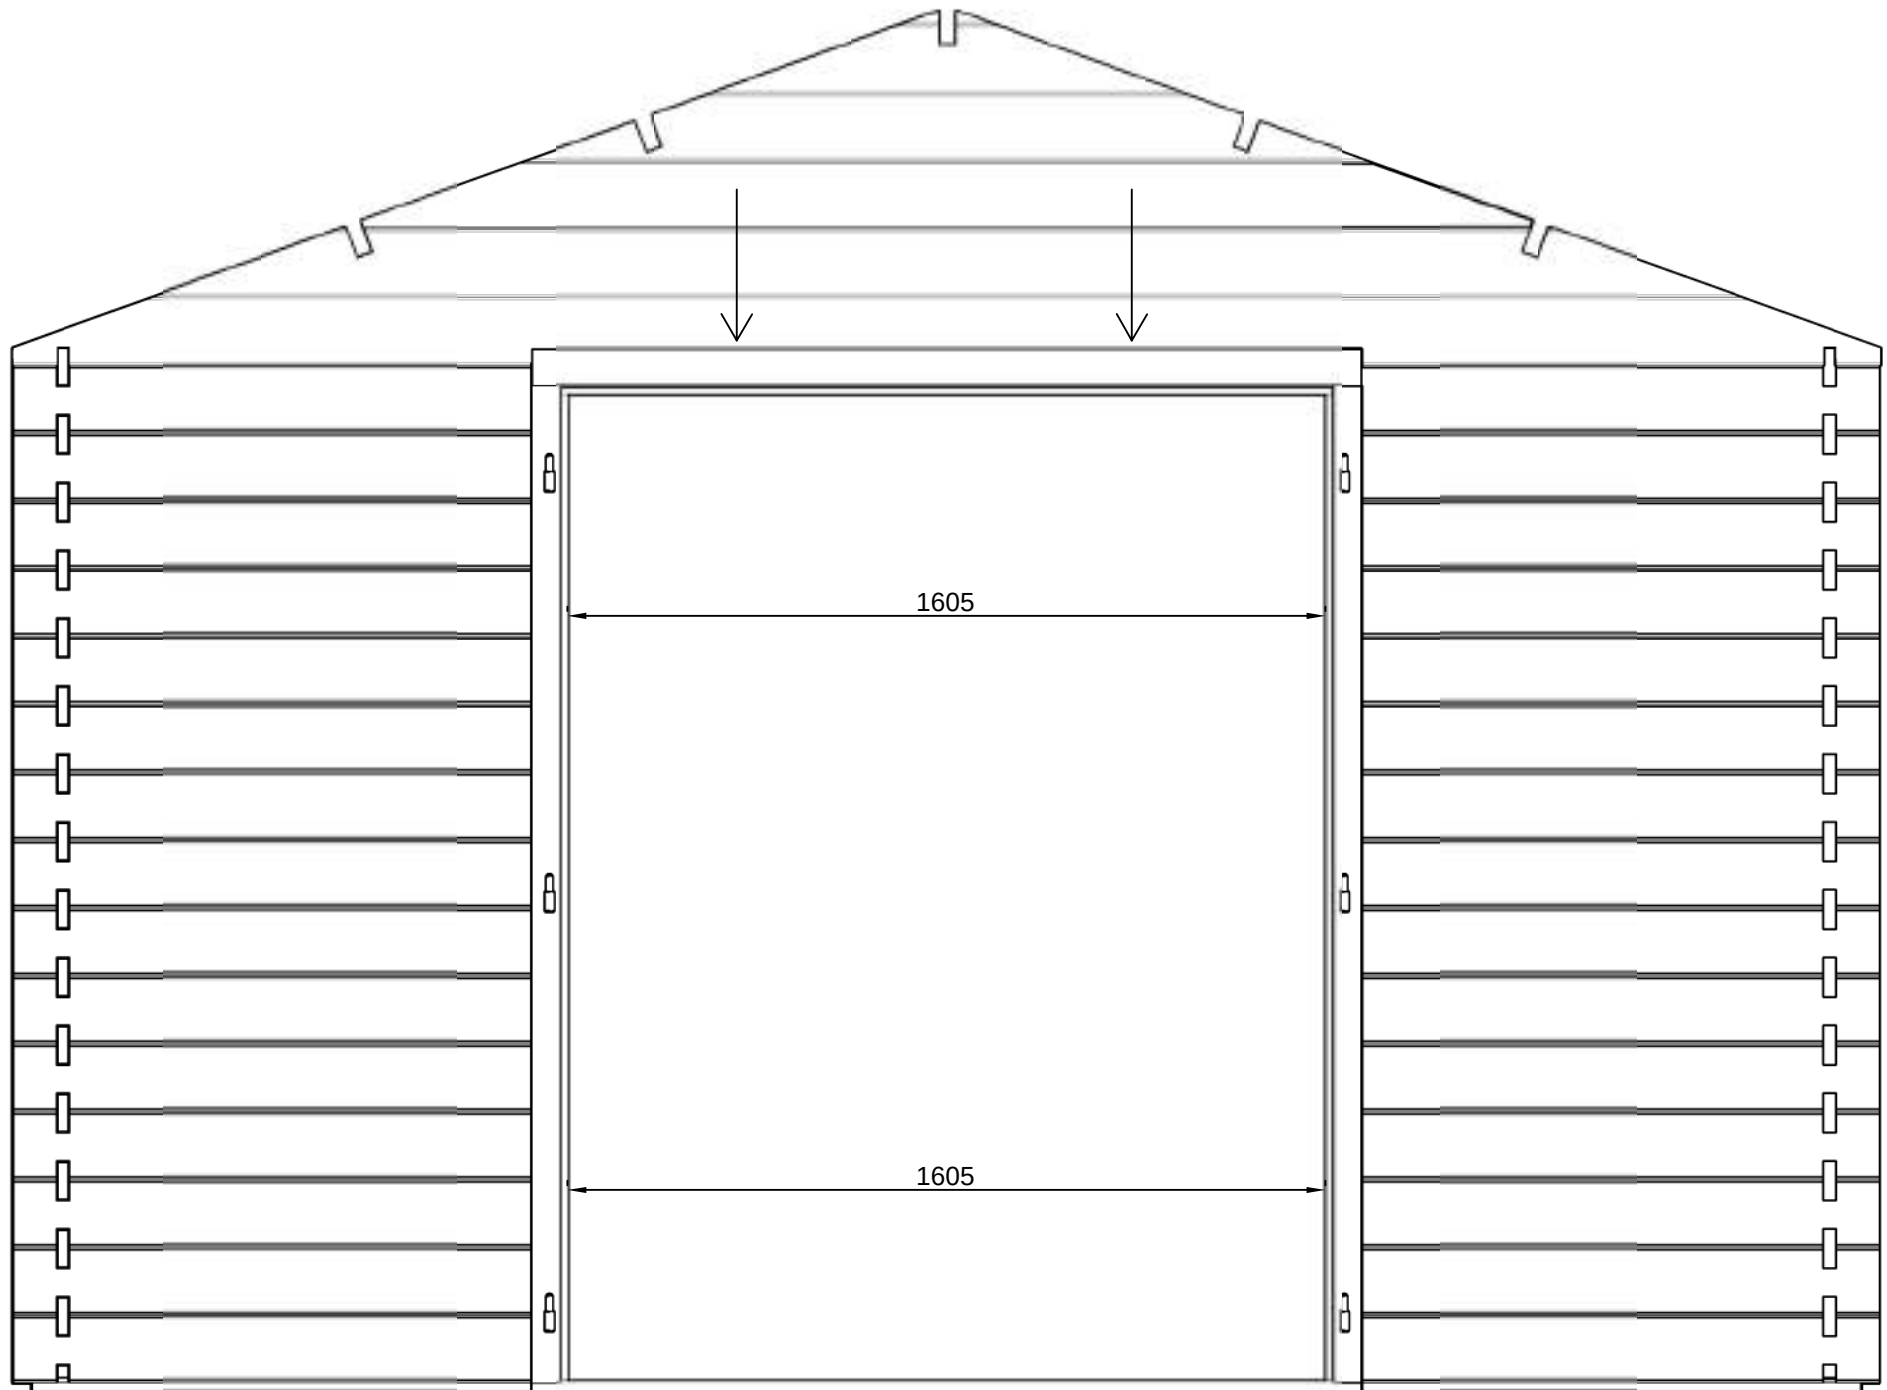

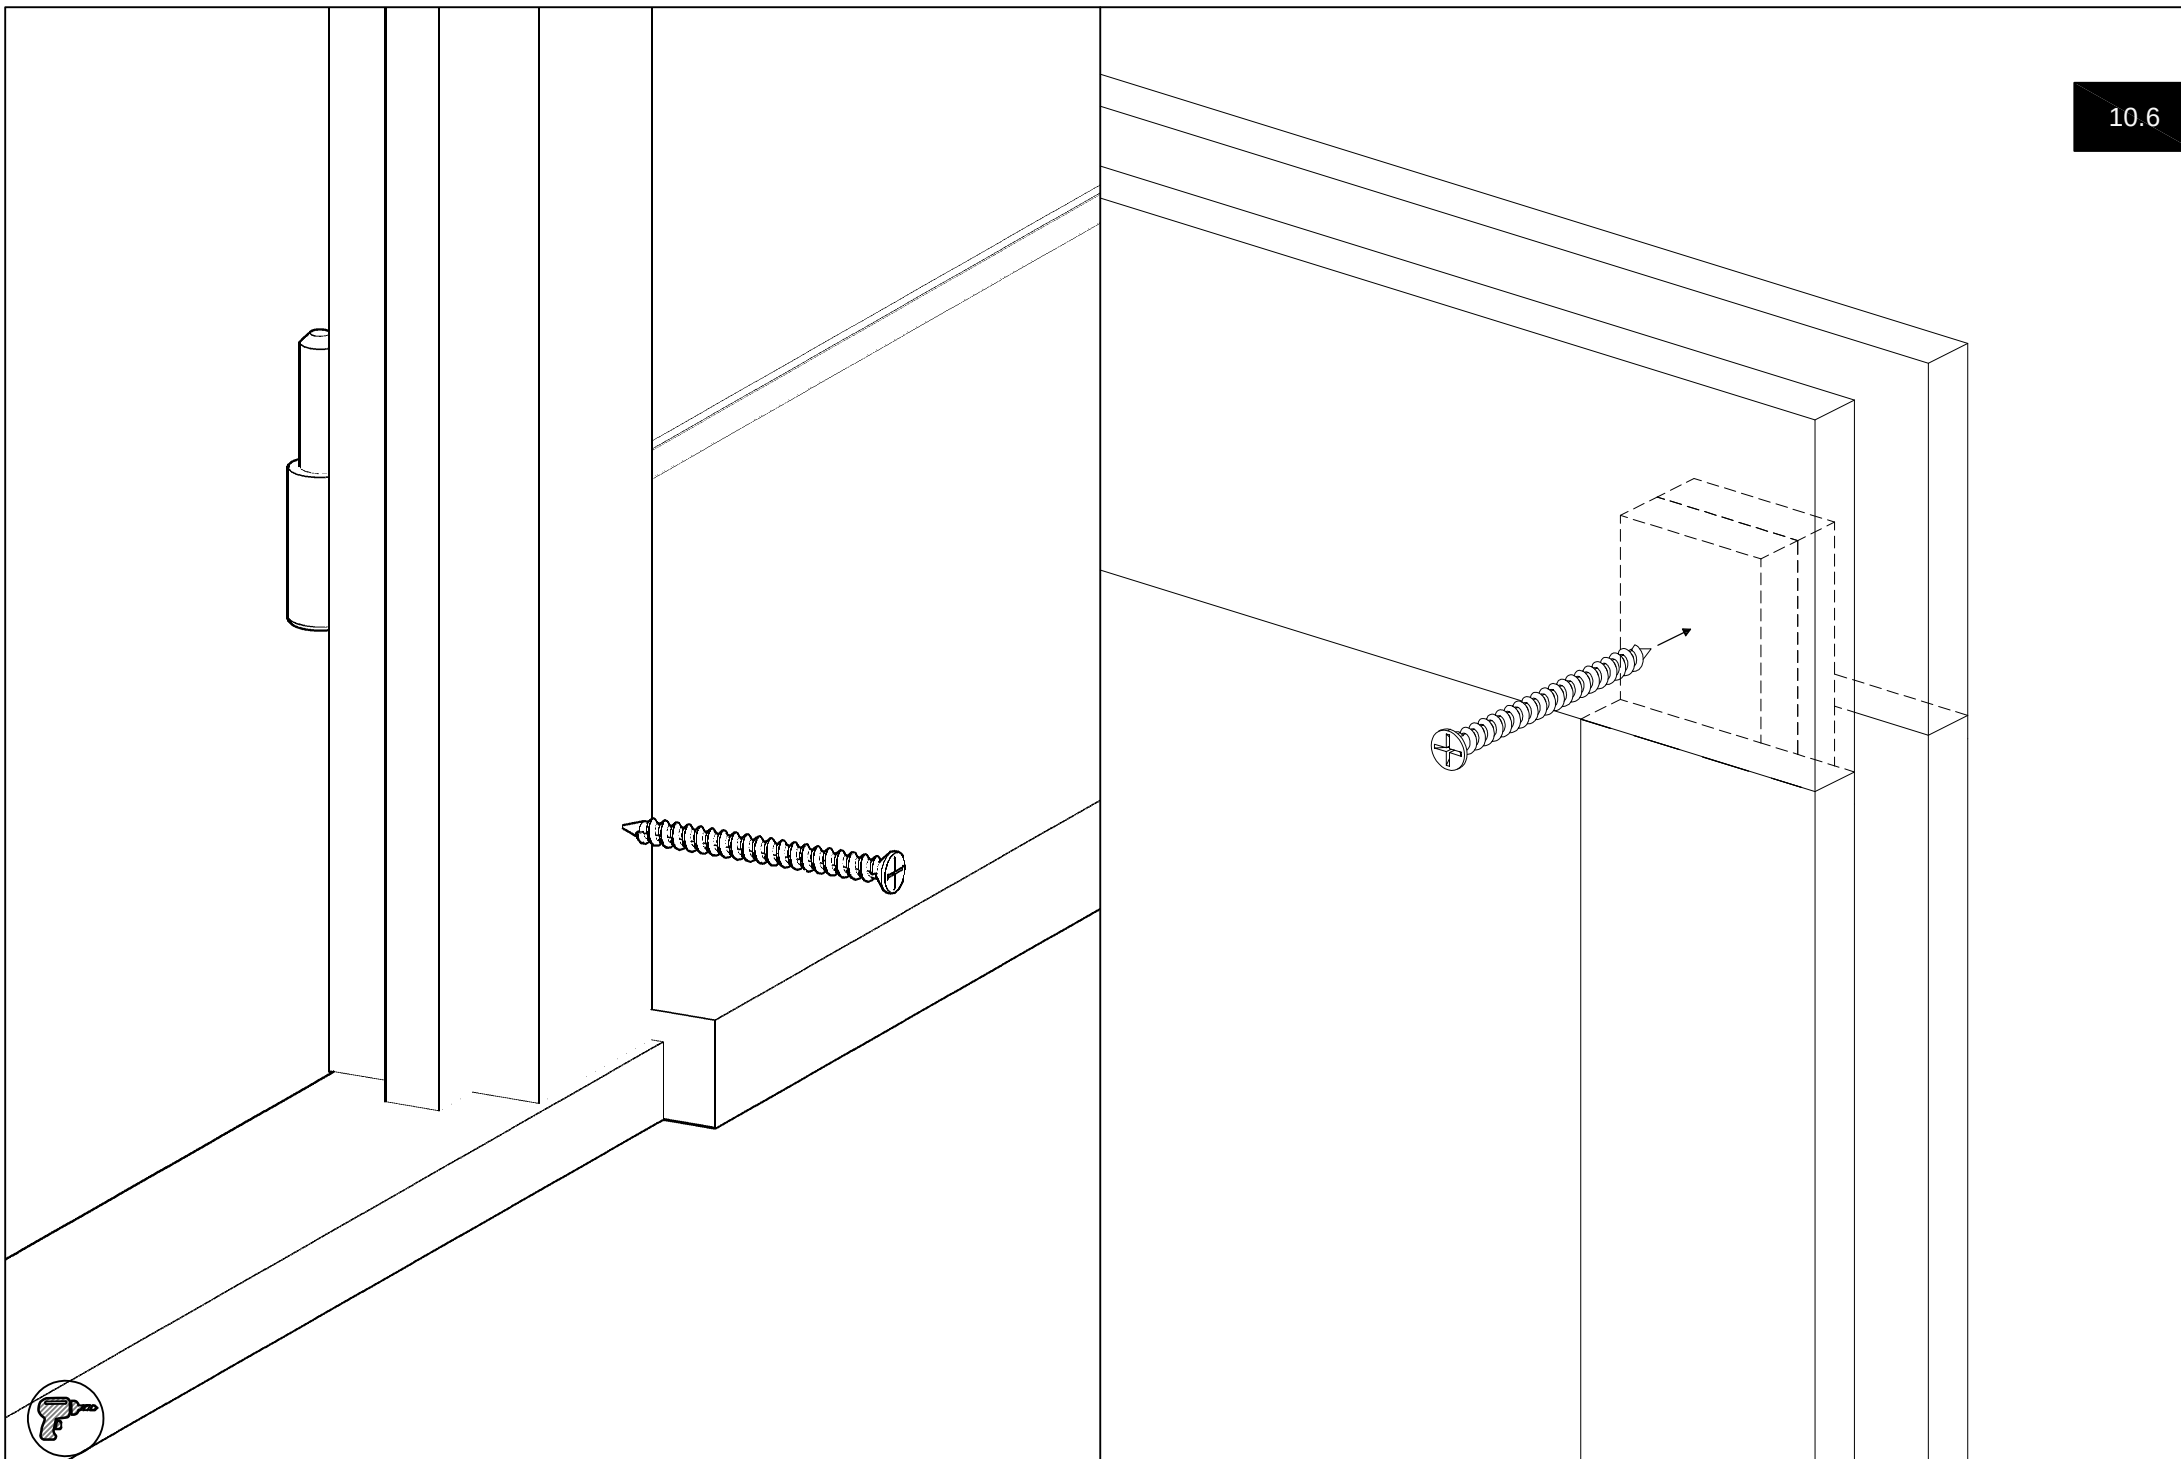

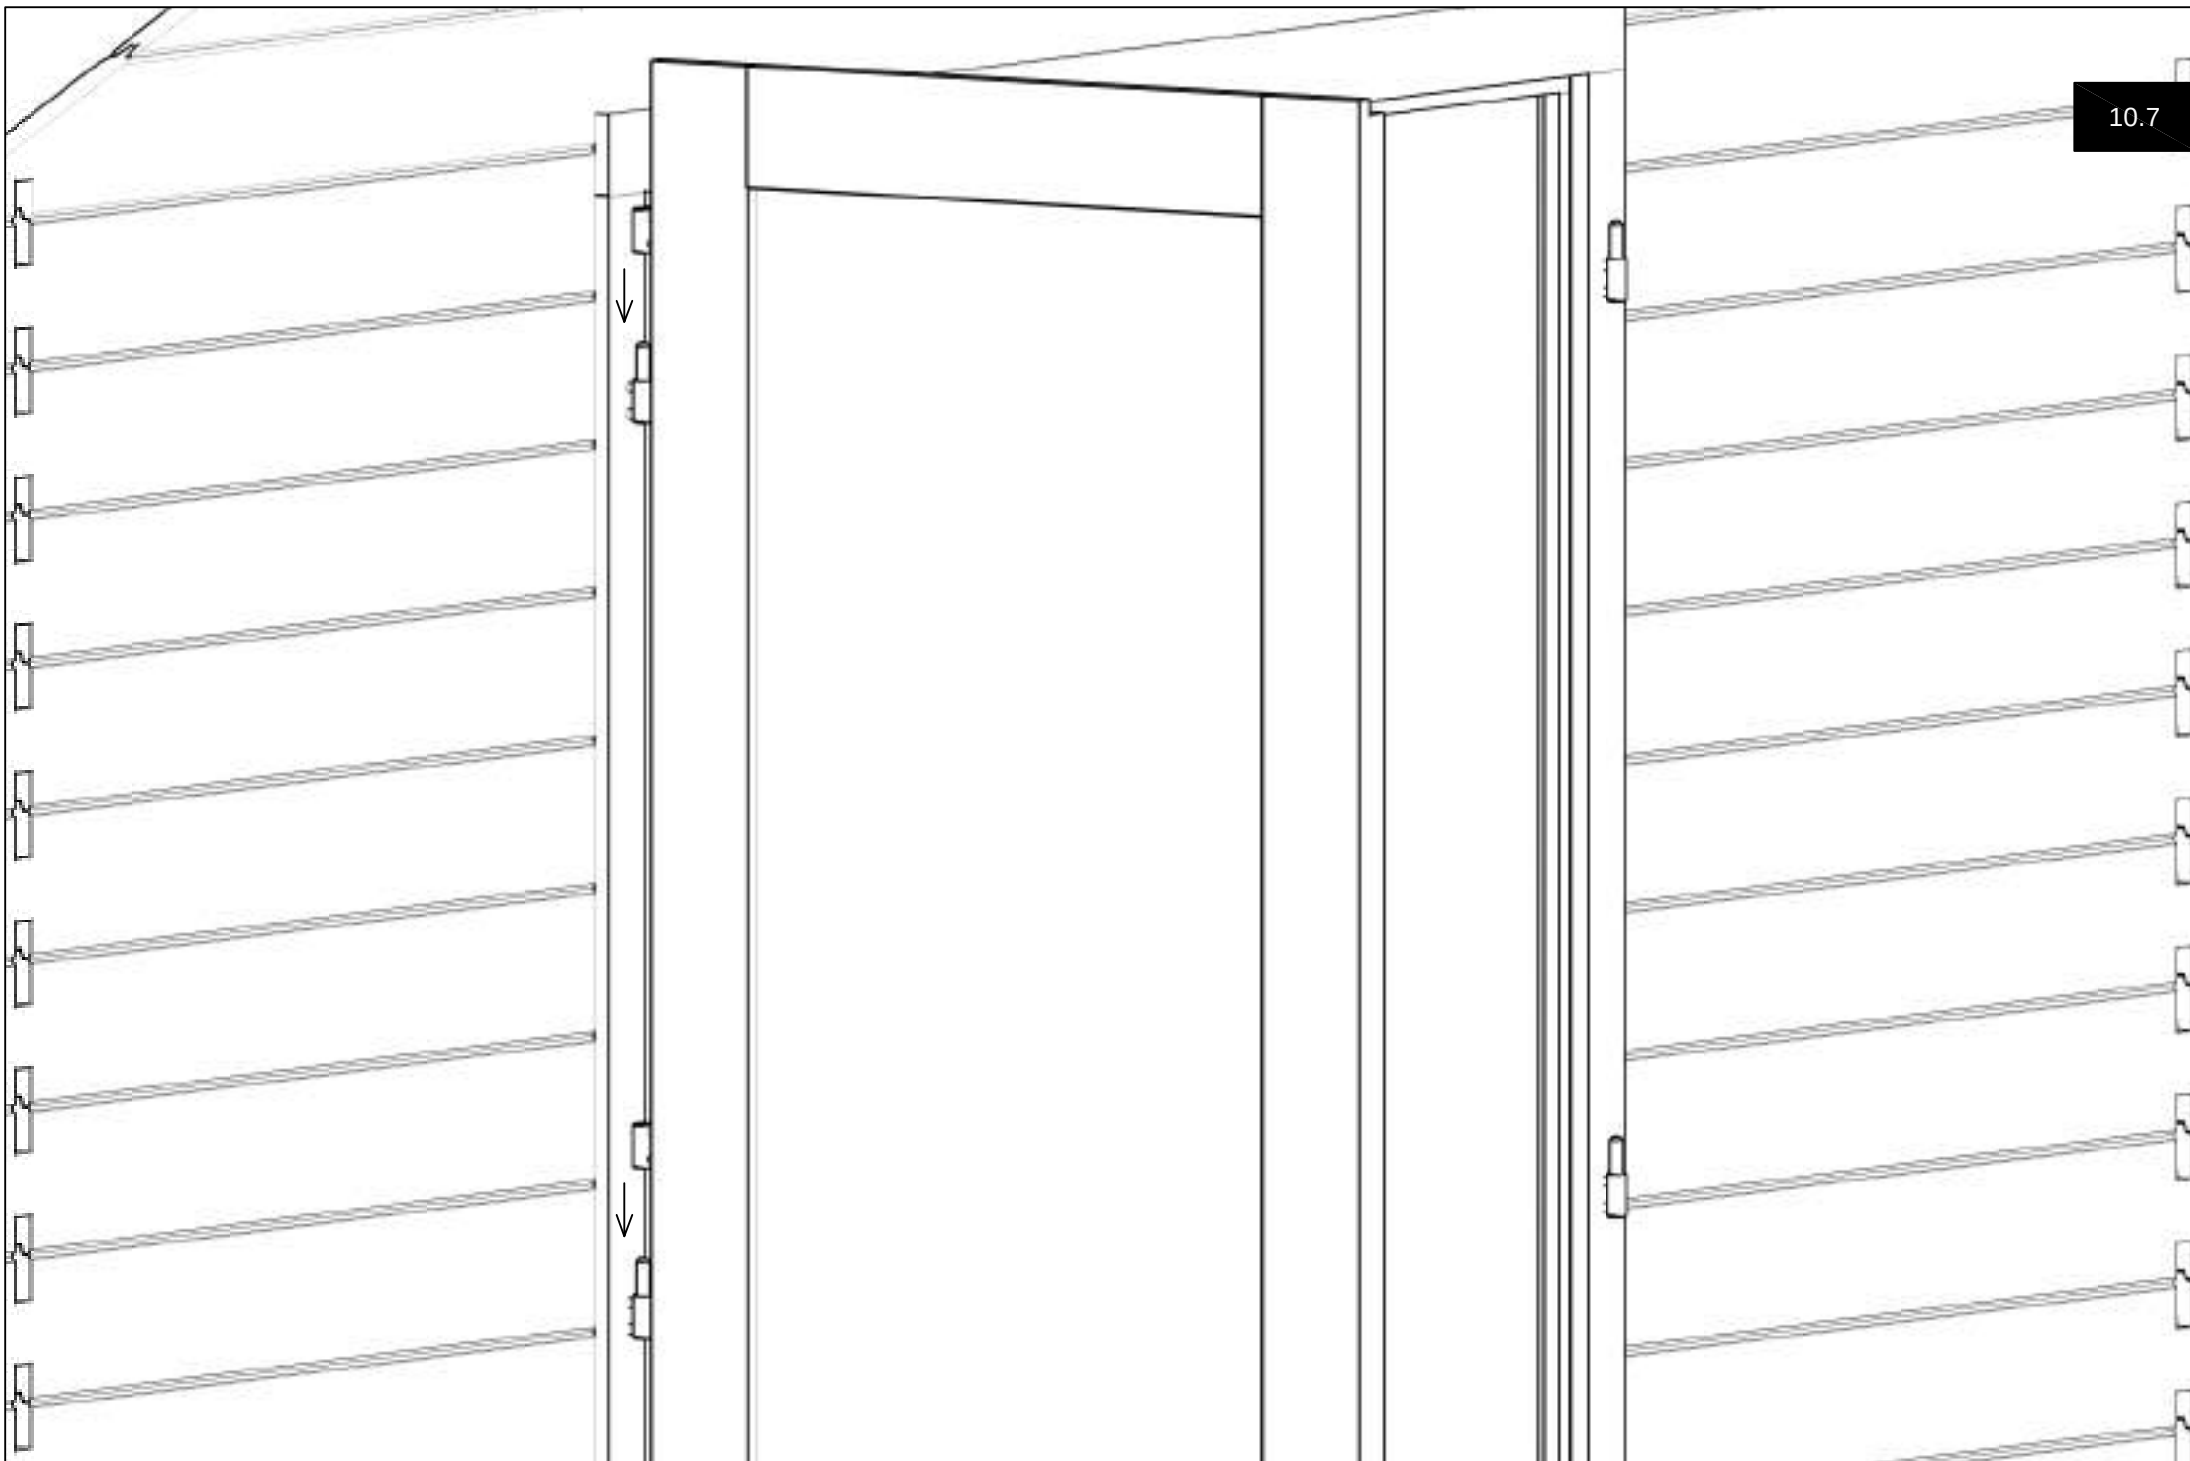

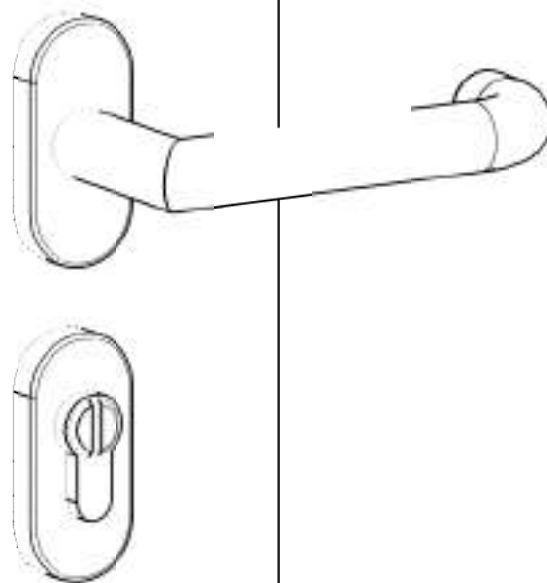

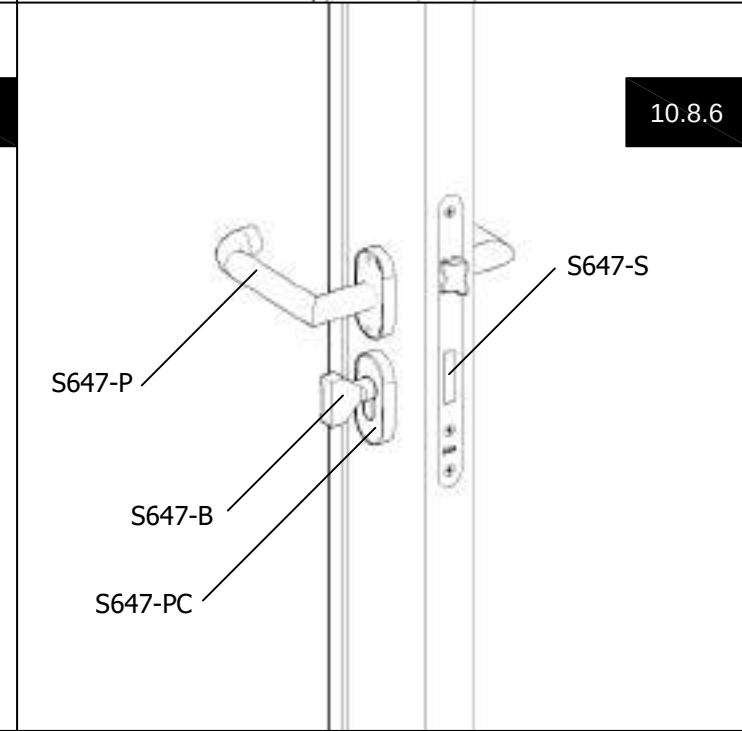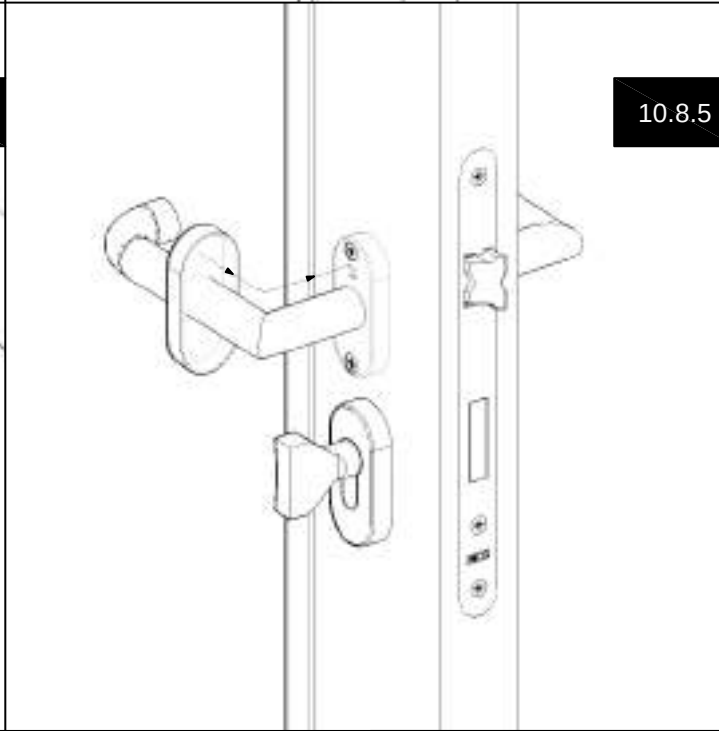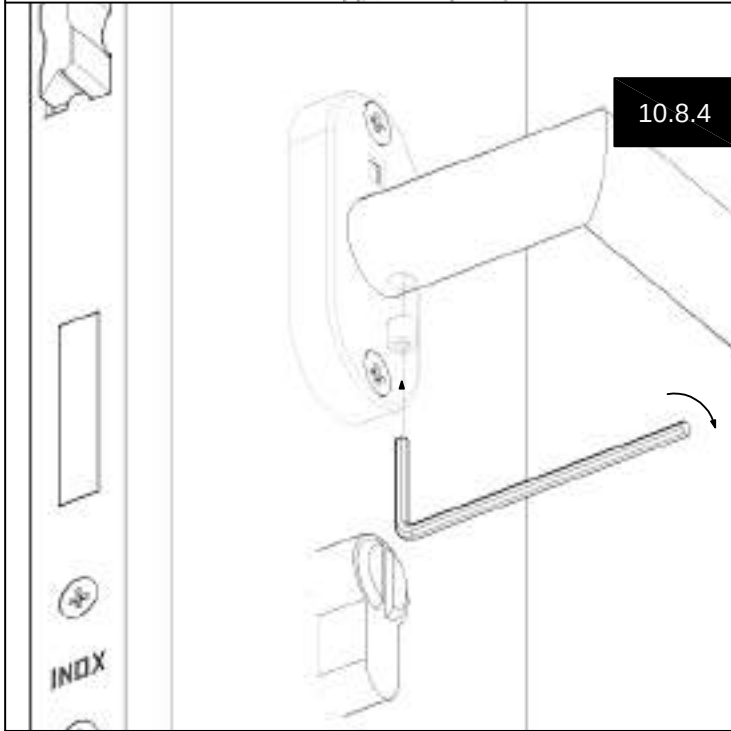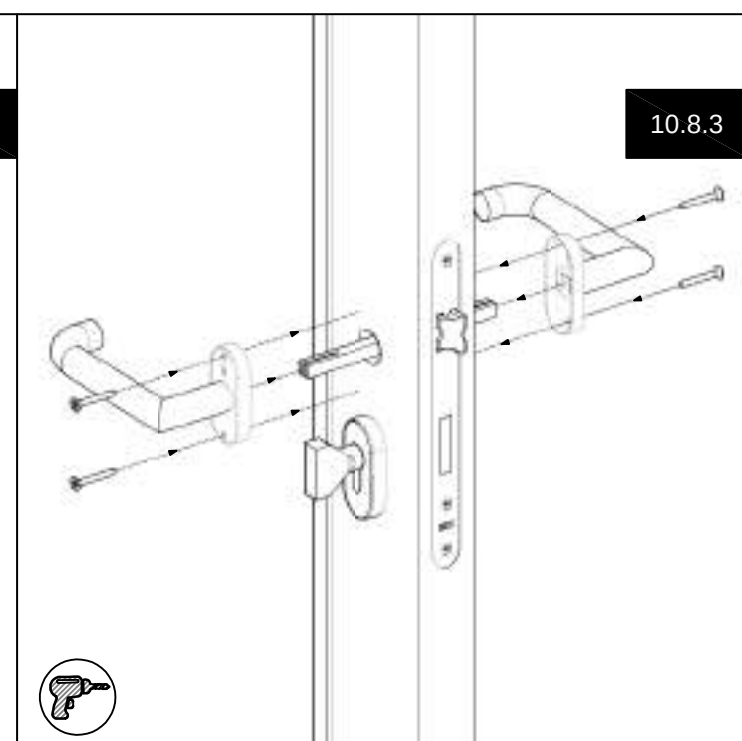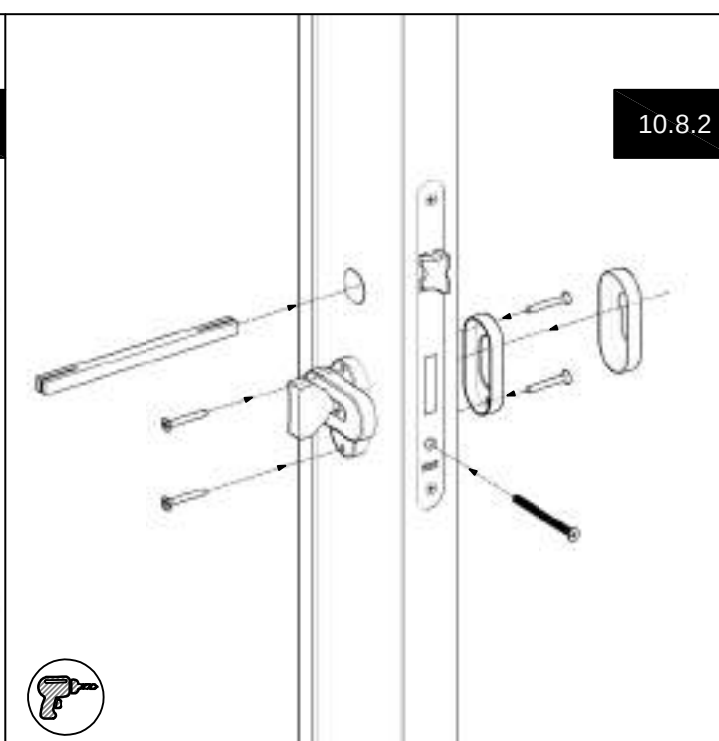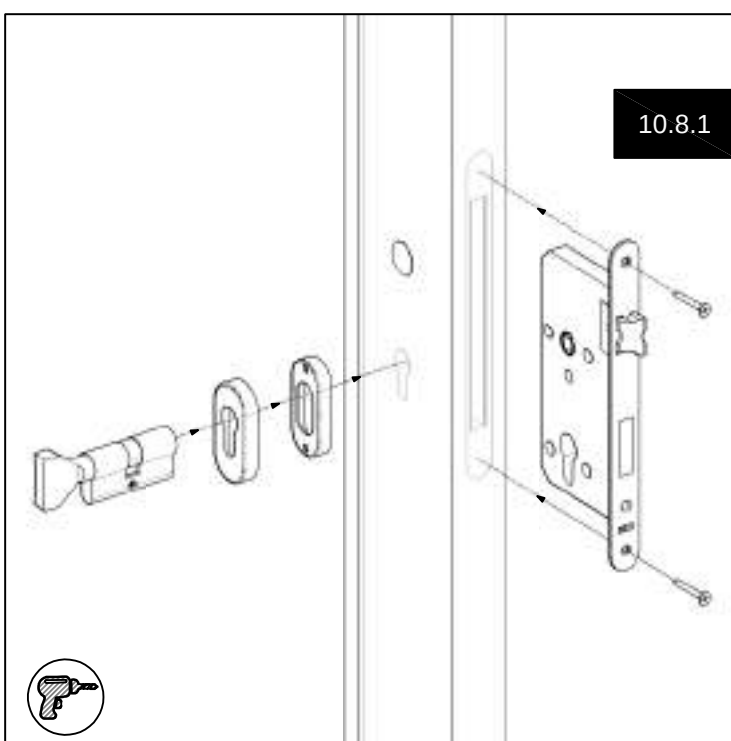


NL/ Zorg dat de te lijmen oppervlakken voldoende proper zijn.
GB/ Make sure the to be glued surfaces are sufficiently clean.
F/ Assure vous que les surfaces à coller sont suffisamment propres.


1




2

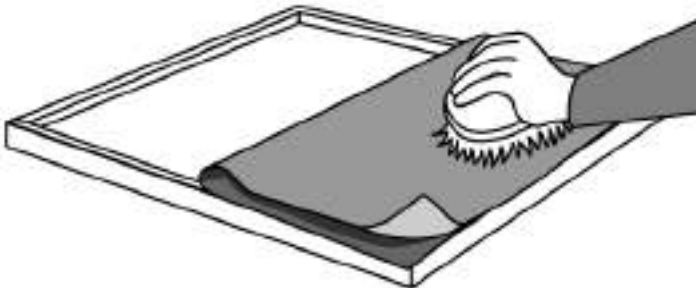

3

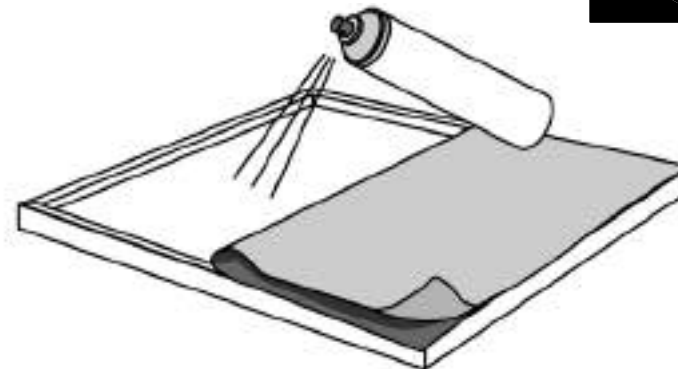

4

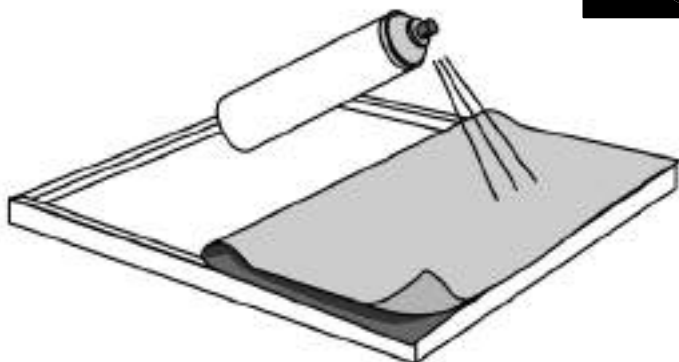

5




6



NL/ Herhaal het proces aan de andere zijde.
GB/ Repeat the process on the other side.
F/ Répétez le processus de l'autre côté.

7

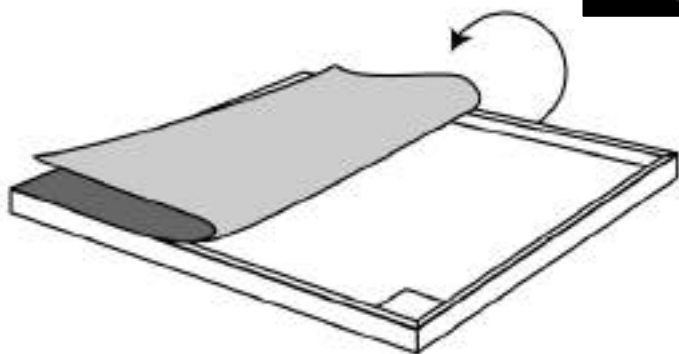

8



9



