
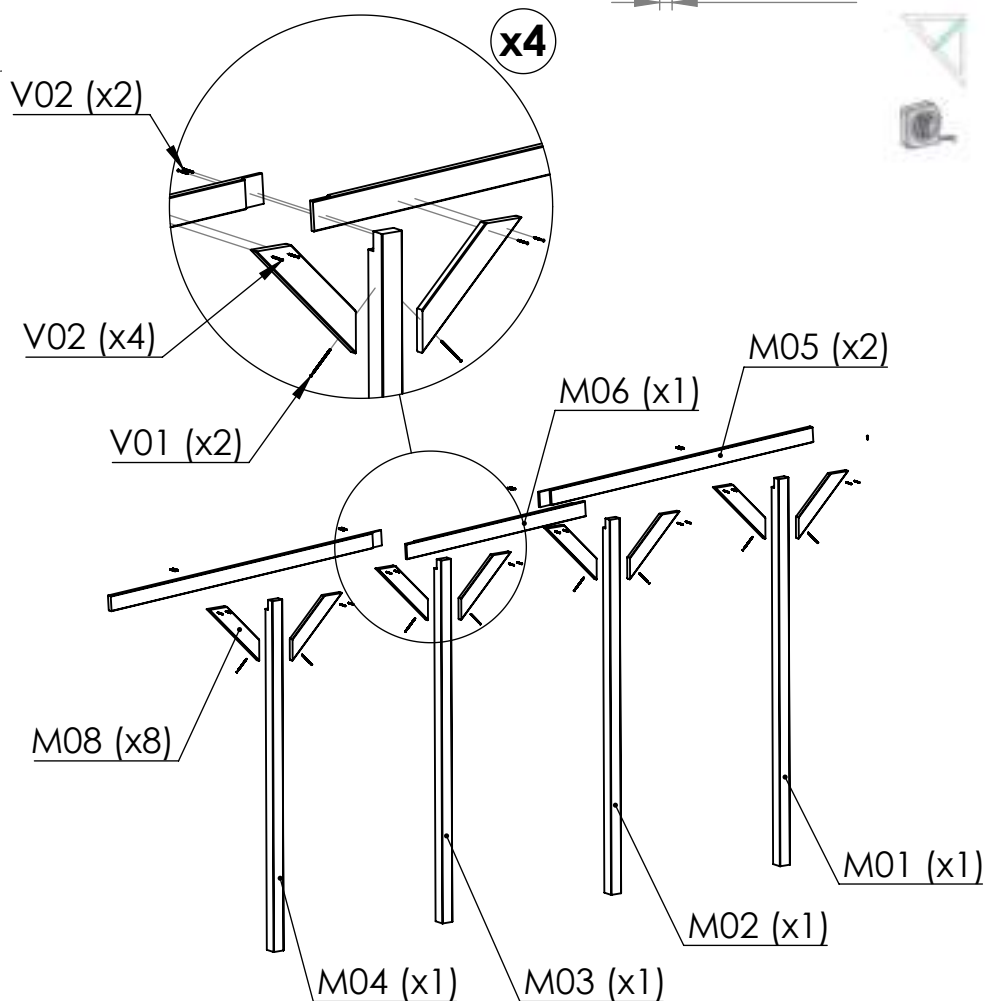





1/8

M01 (x1)
M02 (x1)
M03 (x1)
M04 (x1)
M05 (x2)
M06 (x1)
M08 (x8)
V01 (x8)
V02 (x24)



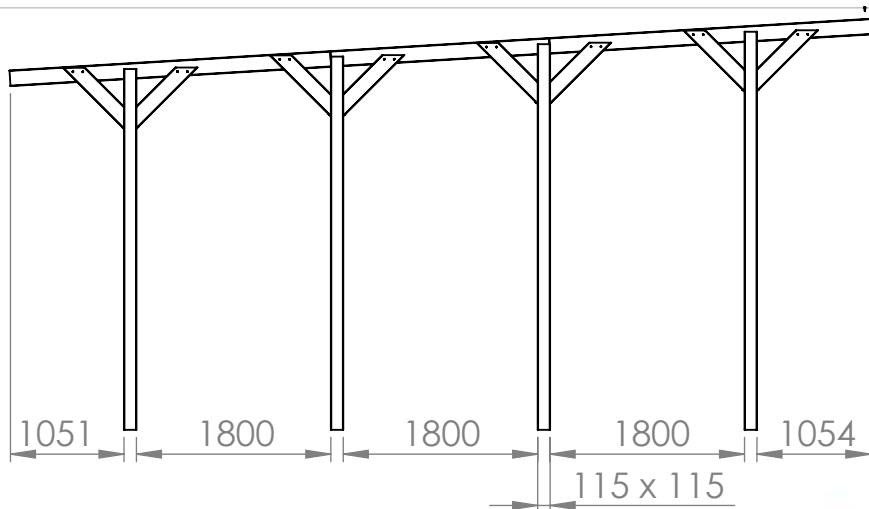


2/8

- M01 (x1)
- M02 (x1)
- M03 (x1)
- M04 (x1)
- M05 (x2)
- M06 (x1)
- M08 (x8)
- V01 (x8)
- V02 (x24)

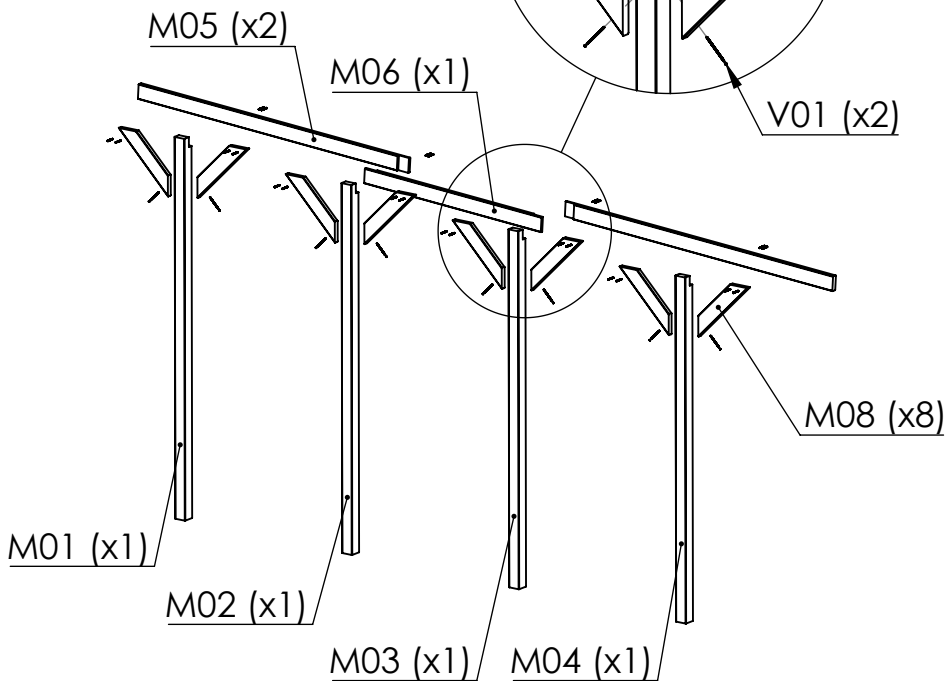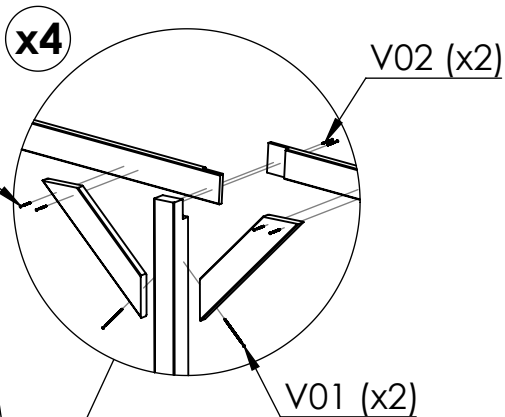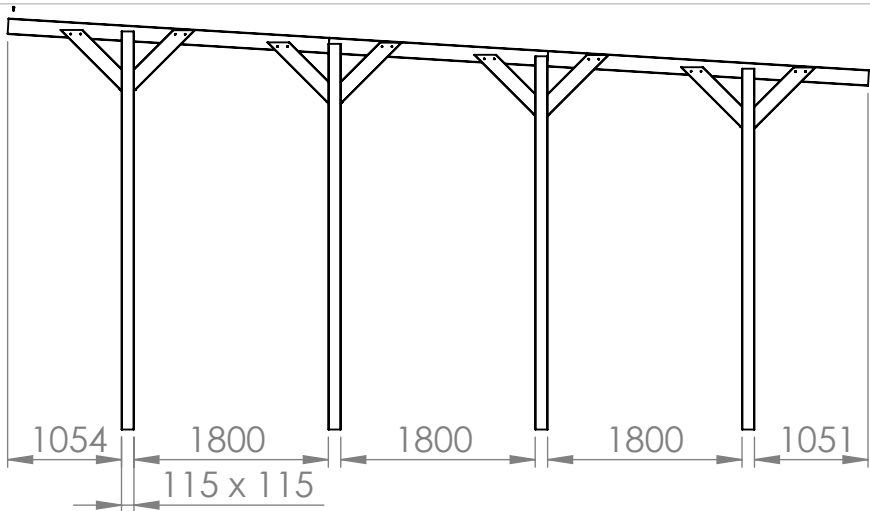


3/8

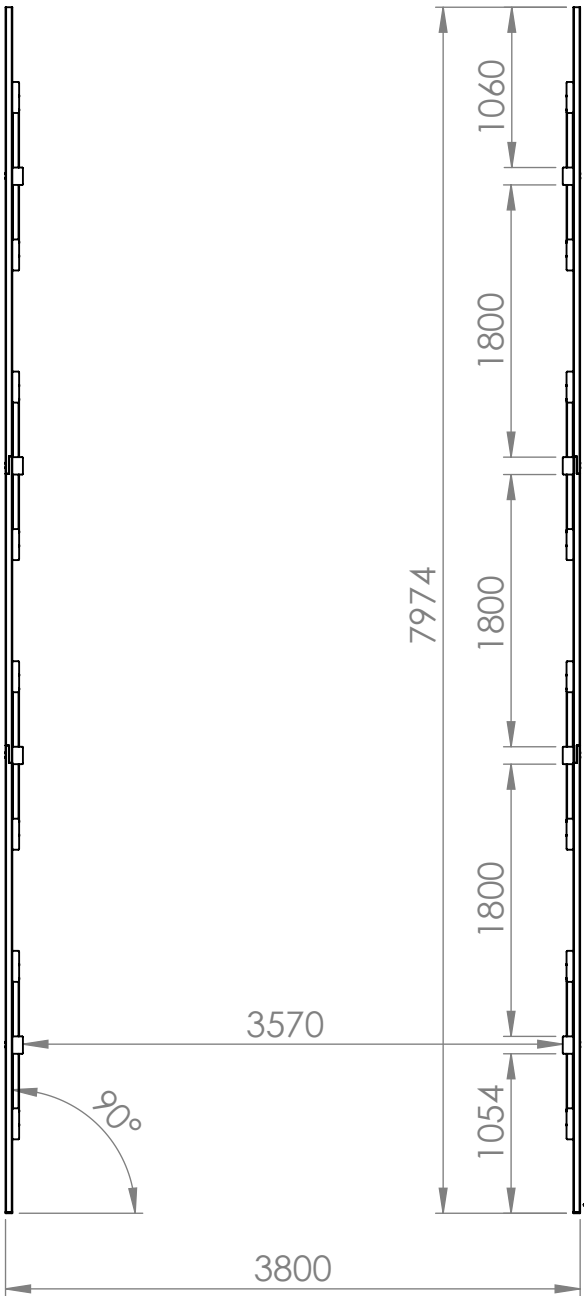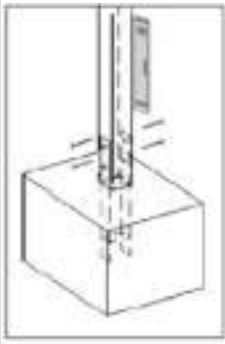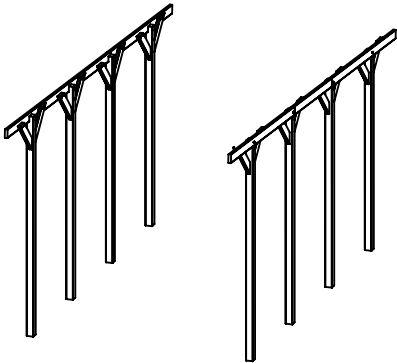


4/8

- M07 (x10)
- M08 (x8)
- V01 (x36)

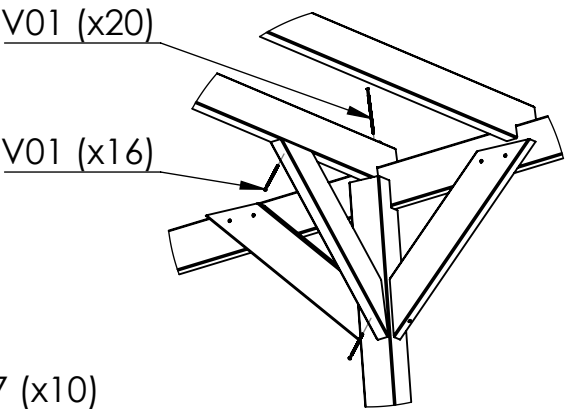

M07 (x10)

M08 (x8)


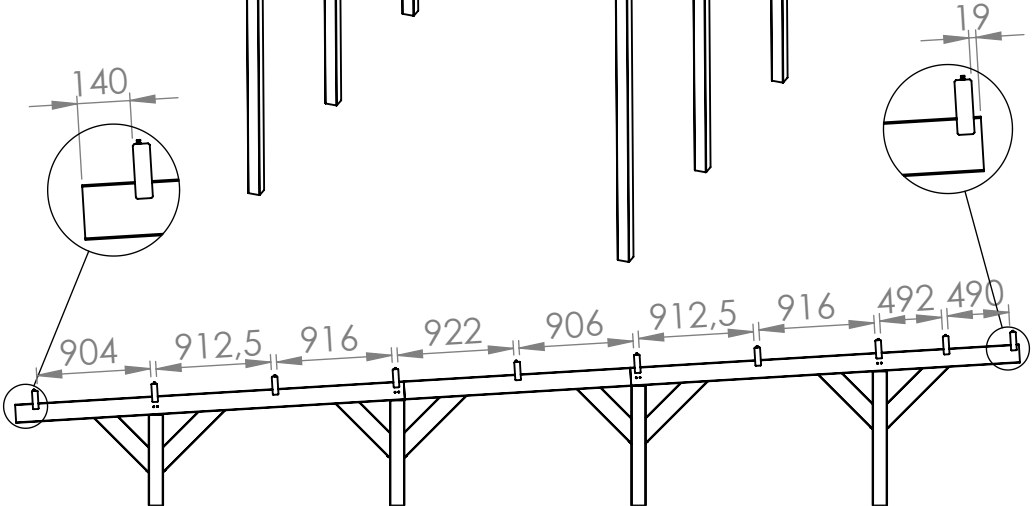


5/8

M12 (x16)
V05 (x250)

V05 (10x25=250)



M12 (x16)

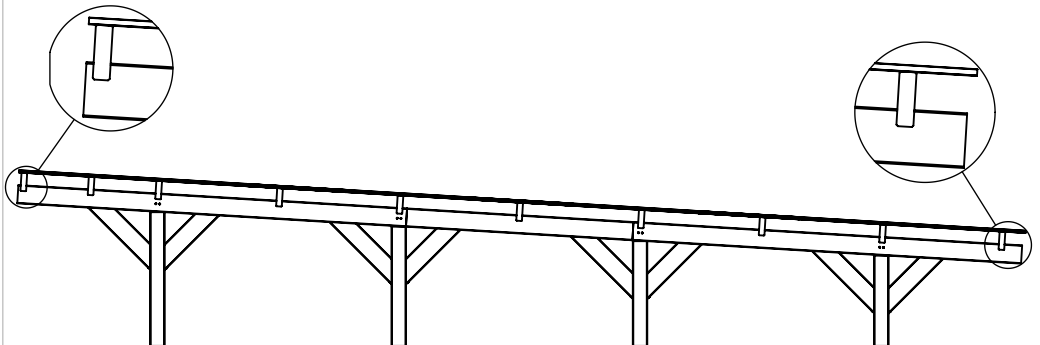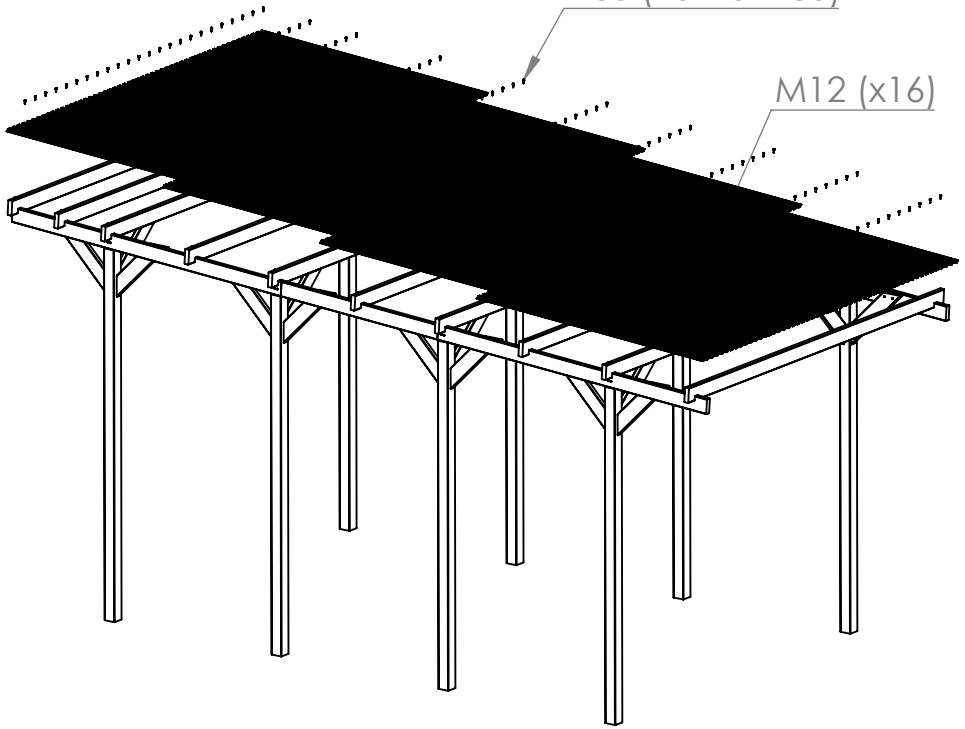



6/8

M09 (x1)

V03 (x15)

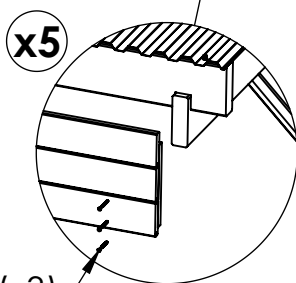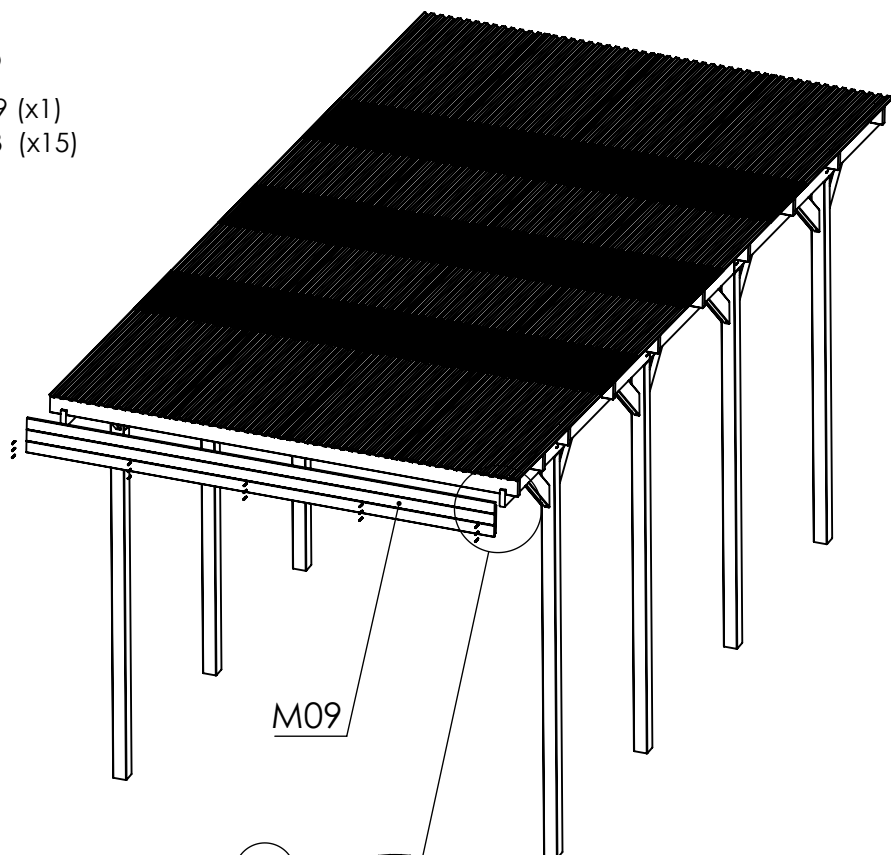






V03 (x3)

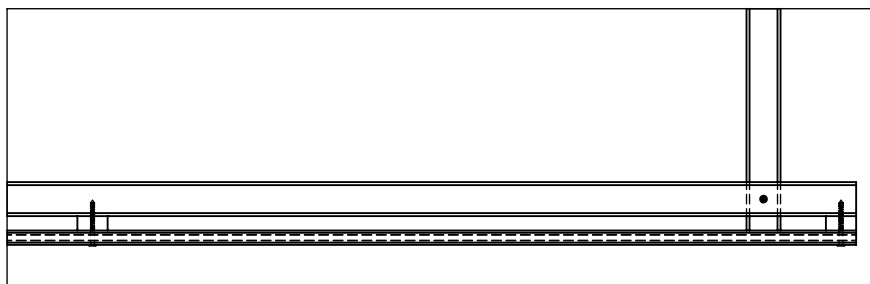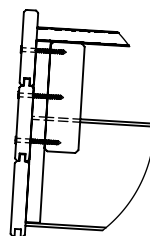

7/8

M10 (x4)

V03 (x40)

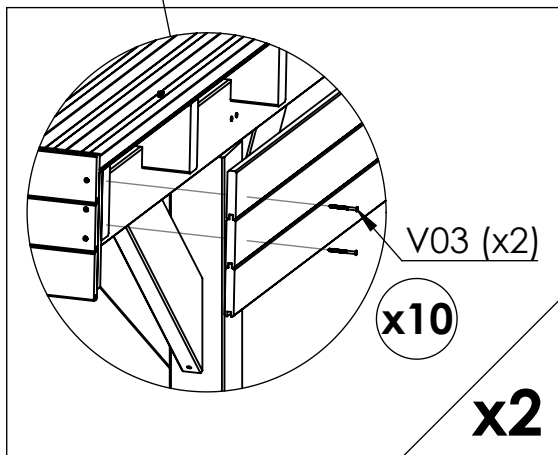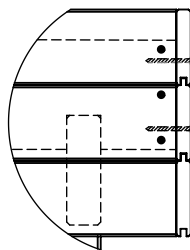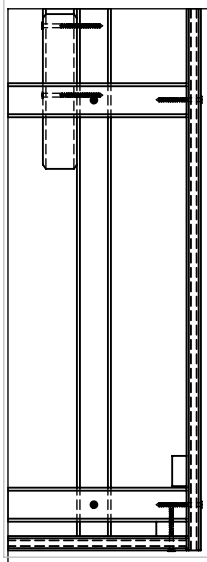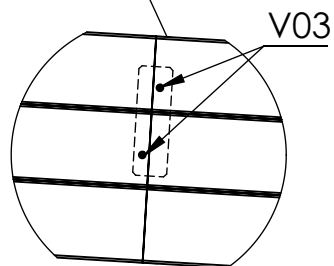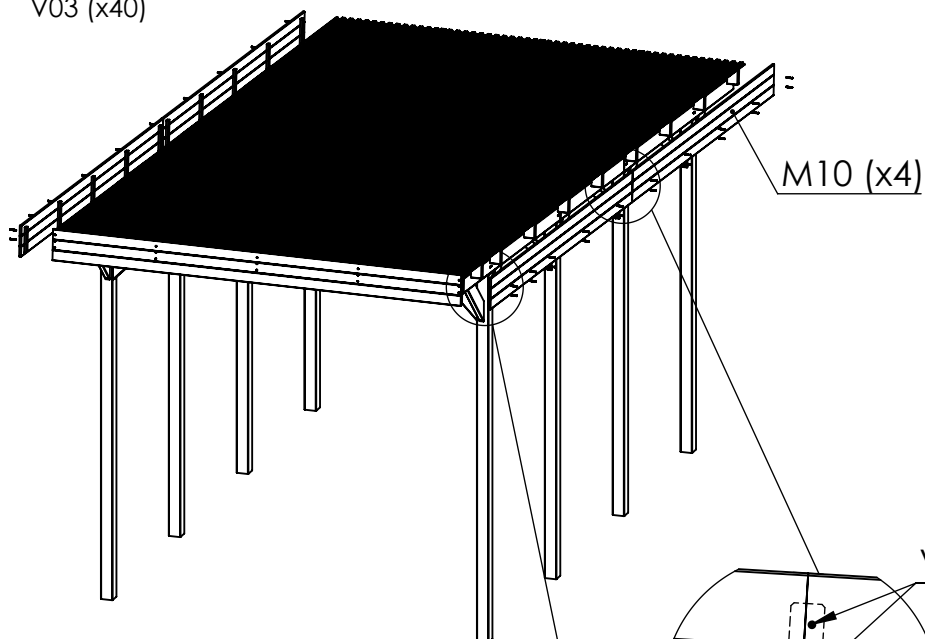

8/8

M11 (x2)

V04 (x6)

