



Bucher XXL

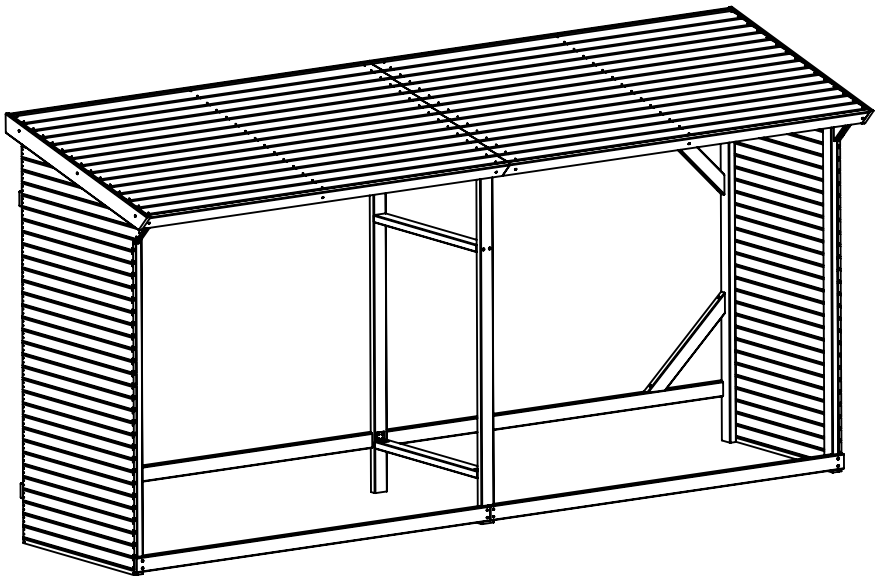

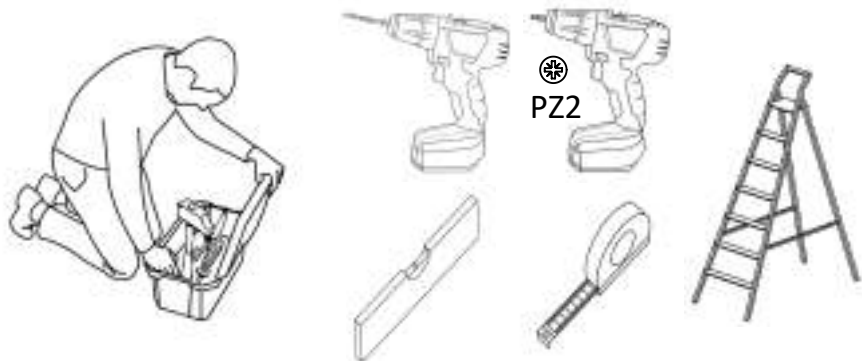


x2



03:00




I
 $\varnothing$ 5x70mm (x24)

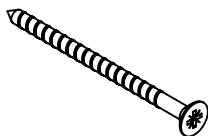

II
 $\varnothing$ 4x50mm (x16)




III
 $\varnothing$ 4x40mm (x24)



IV
 $\varnothing$ 3x25mm (x16)








V
 metal angle 40x40mm (x2)






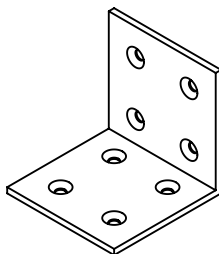



Pré-perçage recommandé/ Pre-drilling recommended / Vorbohren empfohlen / Perforacion previa recomendada

$\varnothing$ Vis / $\varnothing$ Screw / $\varnothing$ schraube / $\varnothing$ Tornillo	$\varnothing$ Percage/ $\varnothing$ Drilling / $\varnothing$ Bohrung/ $\varnothing$ Perforacion
$\varnothing$ 5 (I)	$\varnothing$ 4
$\varnothing$ 4 (II, III)	$\varnothing$ 3

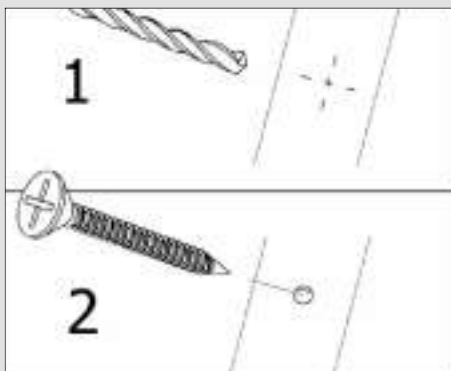

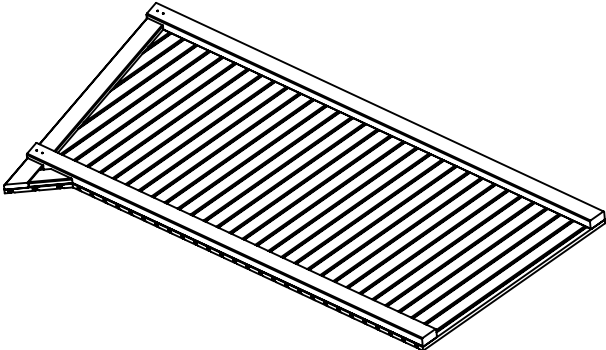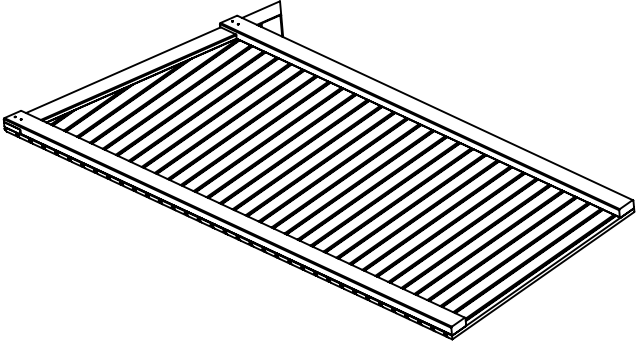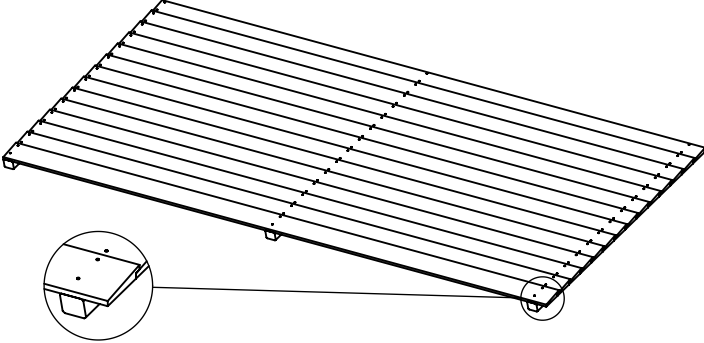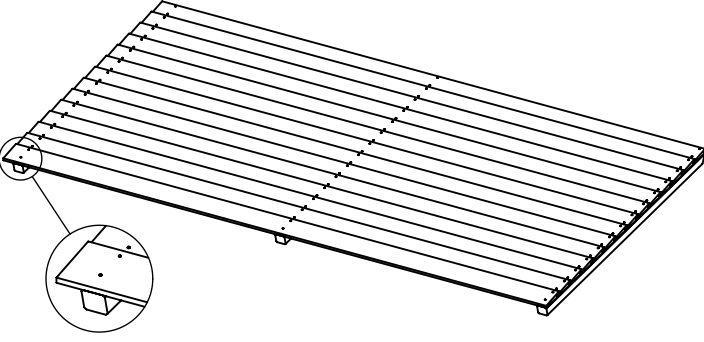
A		x1
B		x1
C		x1
D		x1

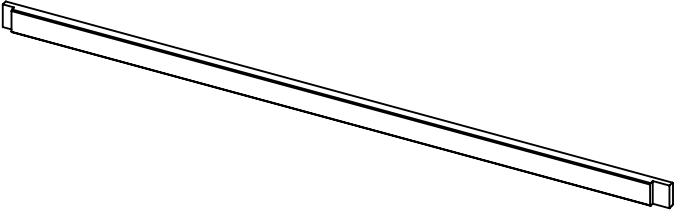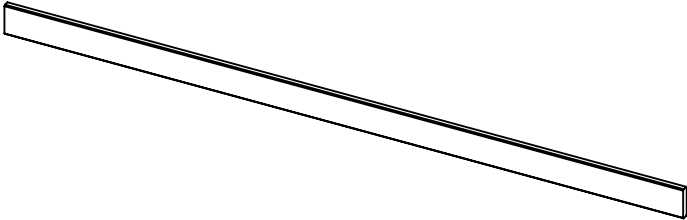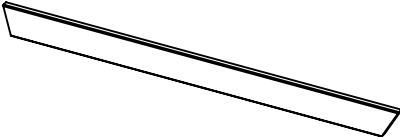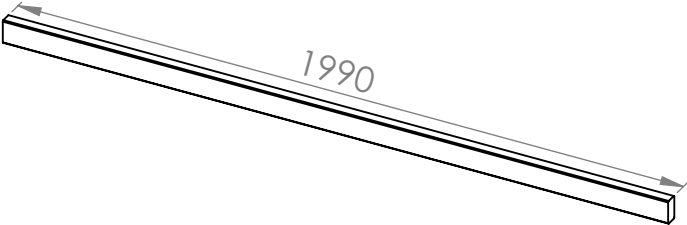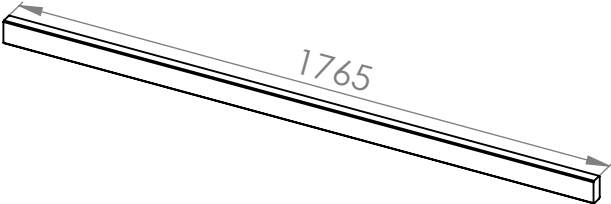E		x6
F		x4
G		x4
H		x2
J		x1
K		x1
L		x2

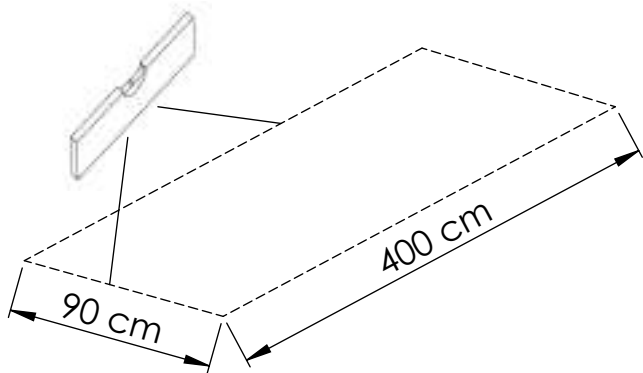




1/11

L x1
IV x8
V x2

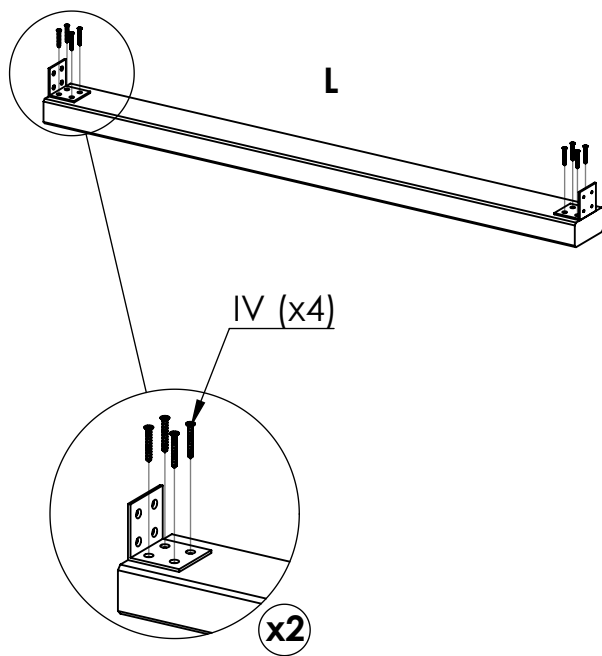


2/11

J x1
K x1
L x1
I x4
IV x8

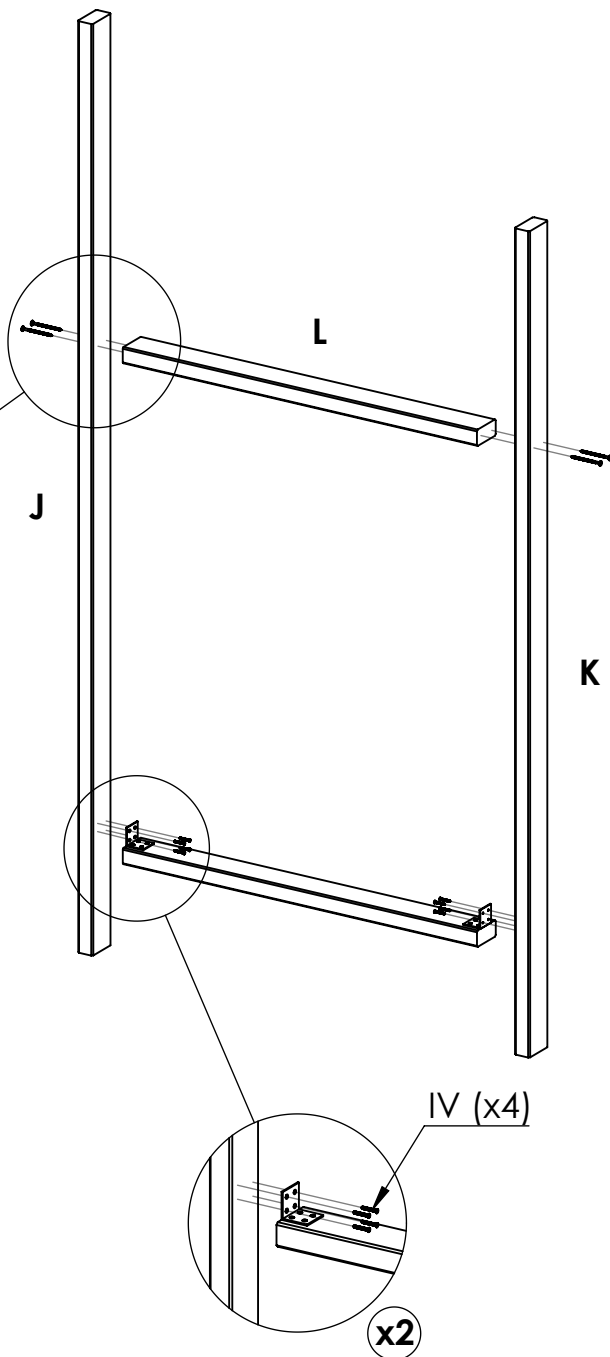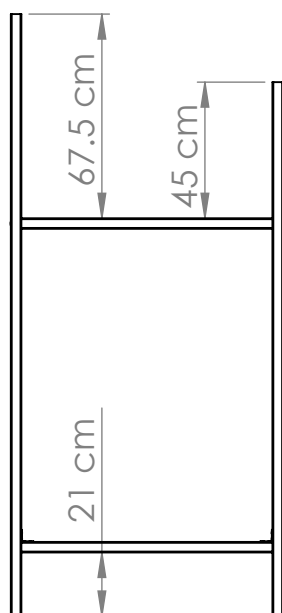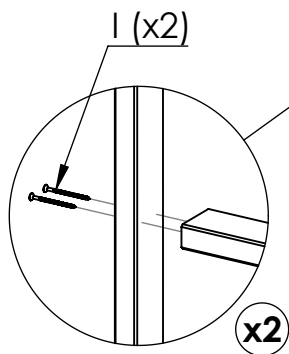


3/11

- A x1
- E x1
- I x2
- II x2

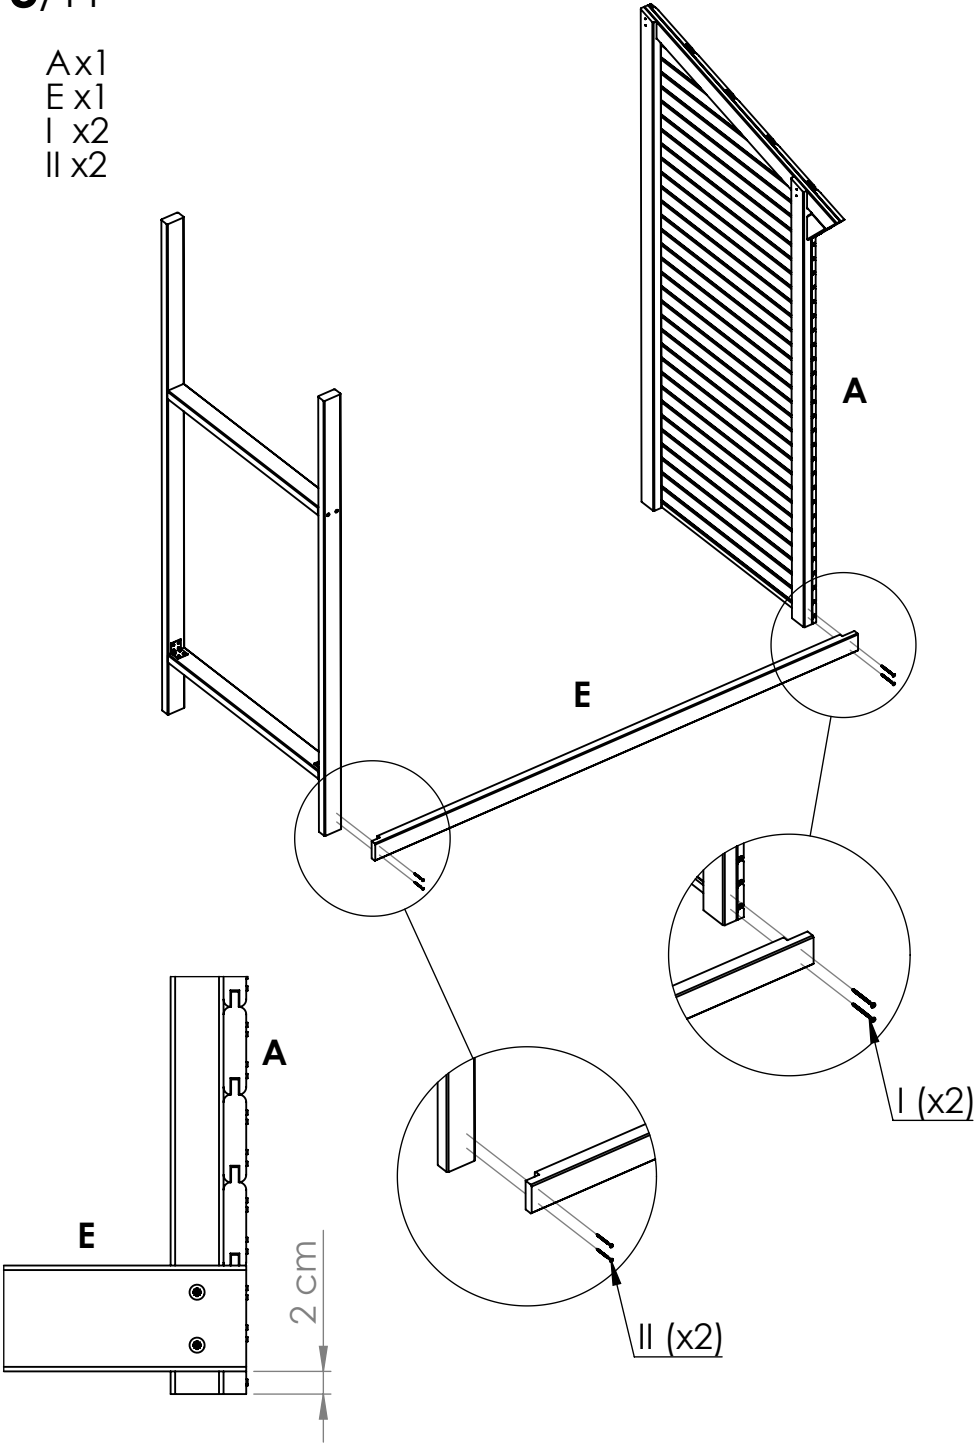

E x2
I x4
II x4

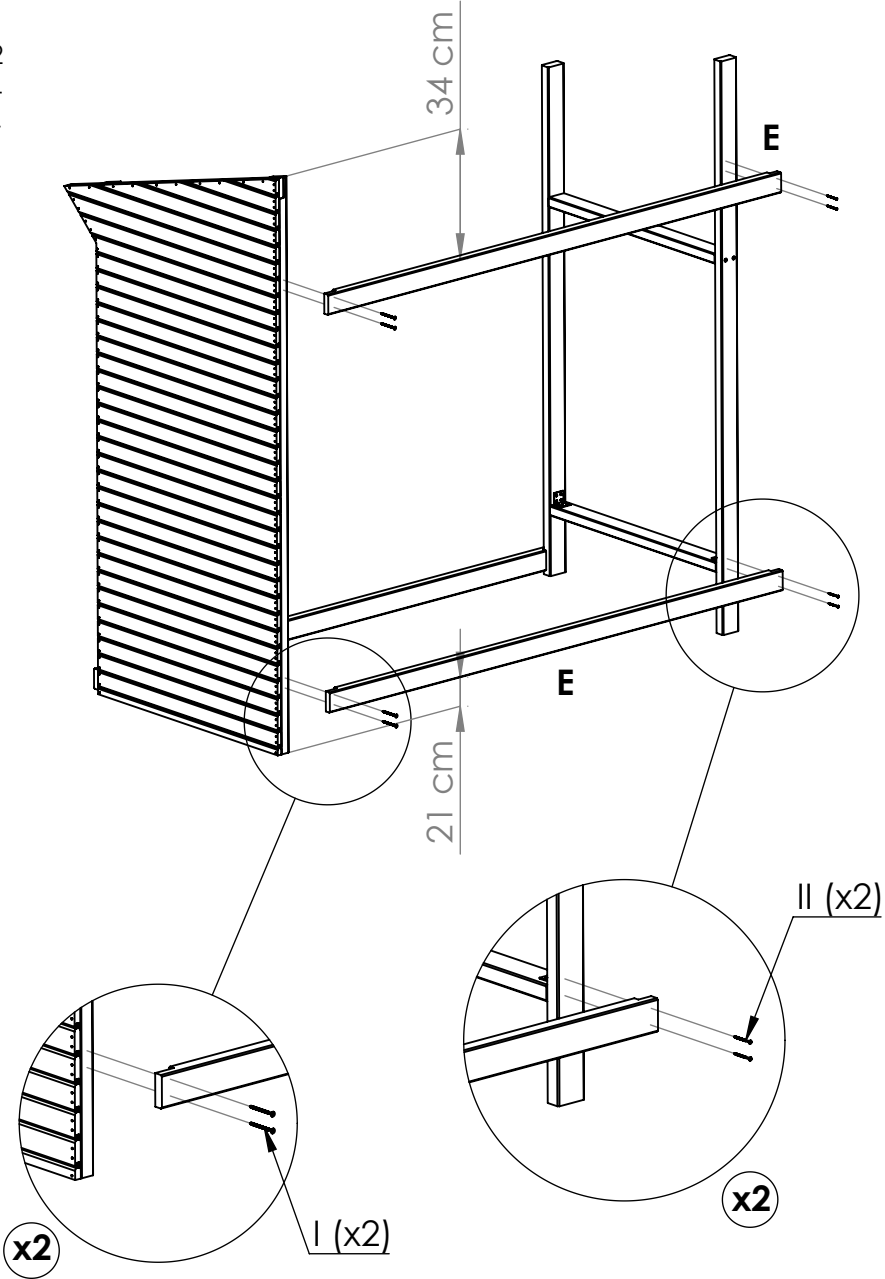


B x1

E x2

I x4

II x4

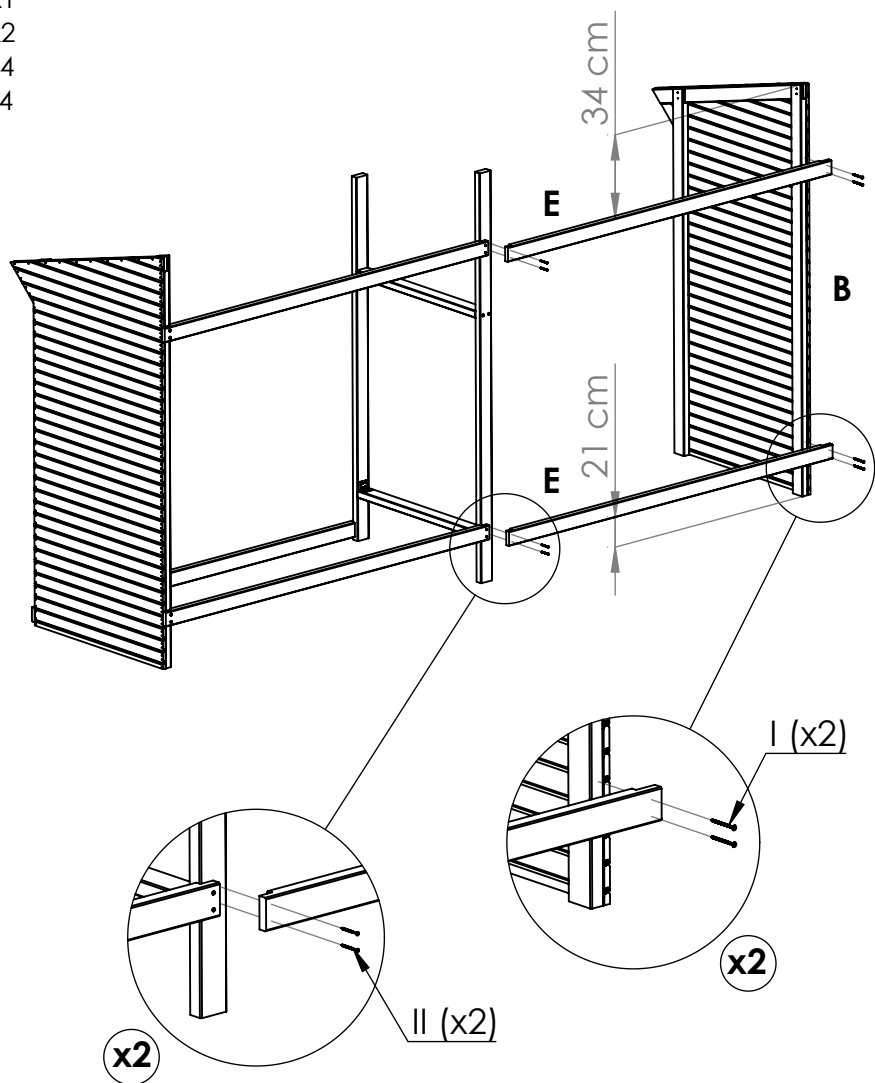


6/11

E x1



I x2

II x2

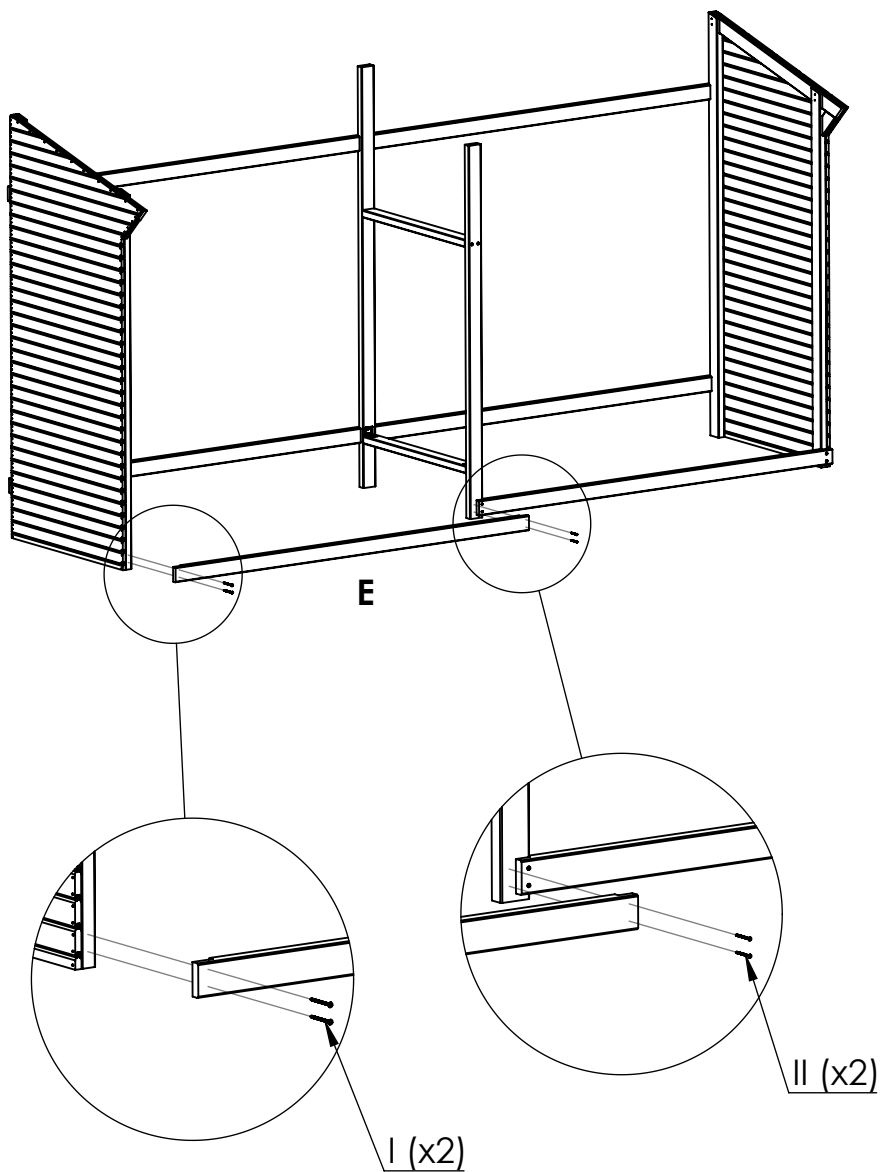

7/11


F x4
I x8

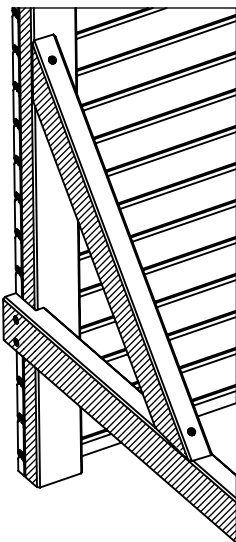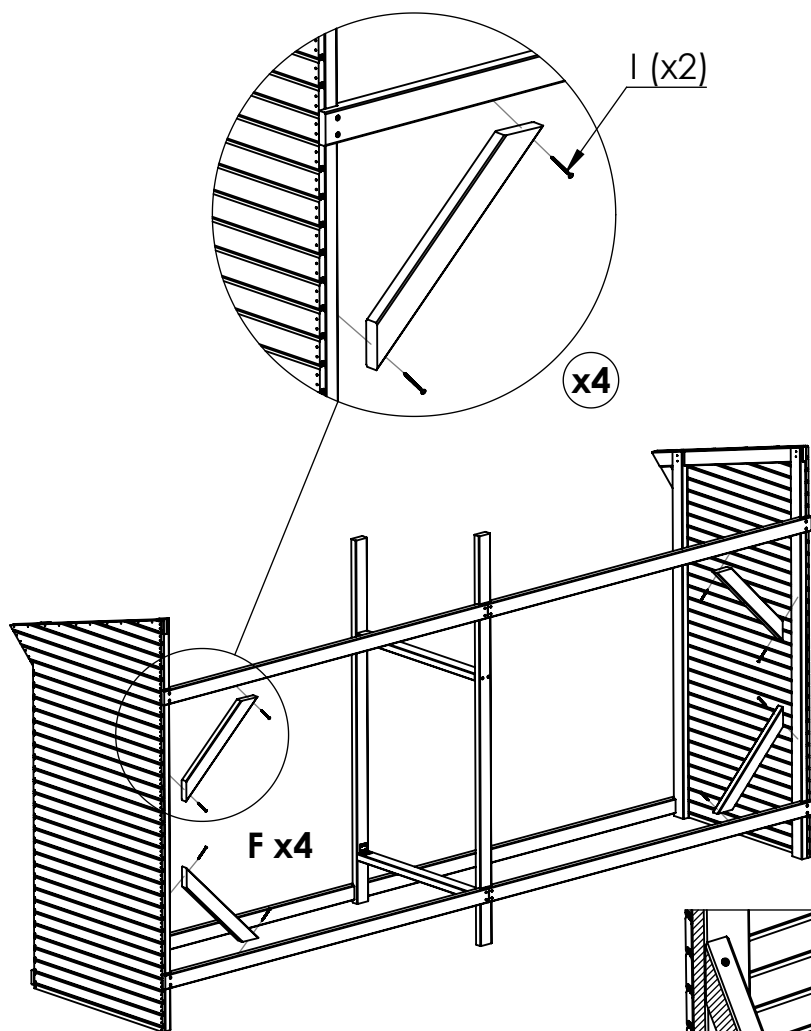

C x1


D x1

III x6

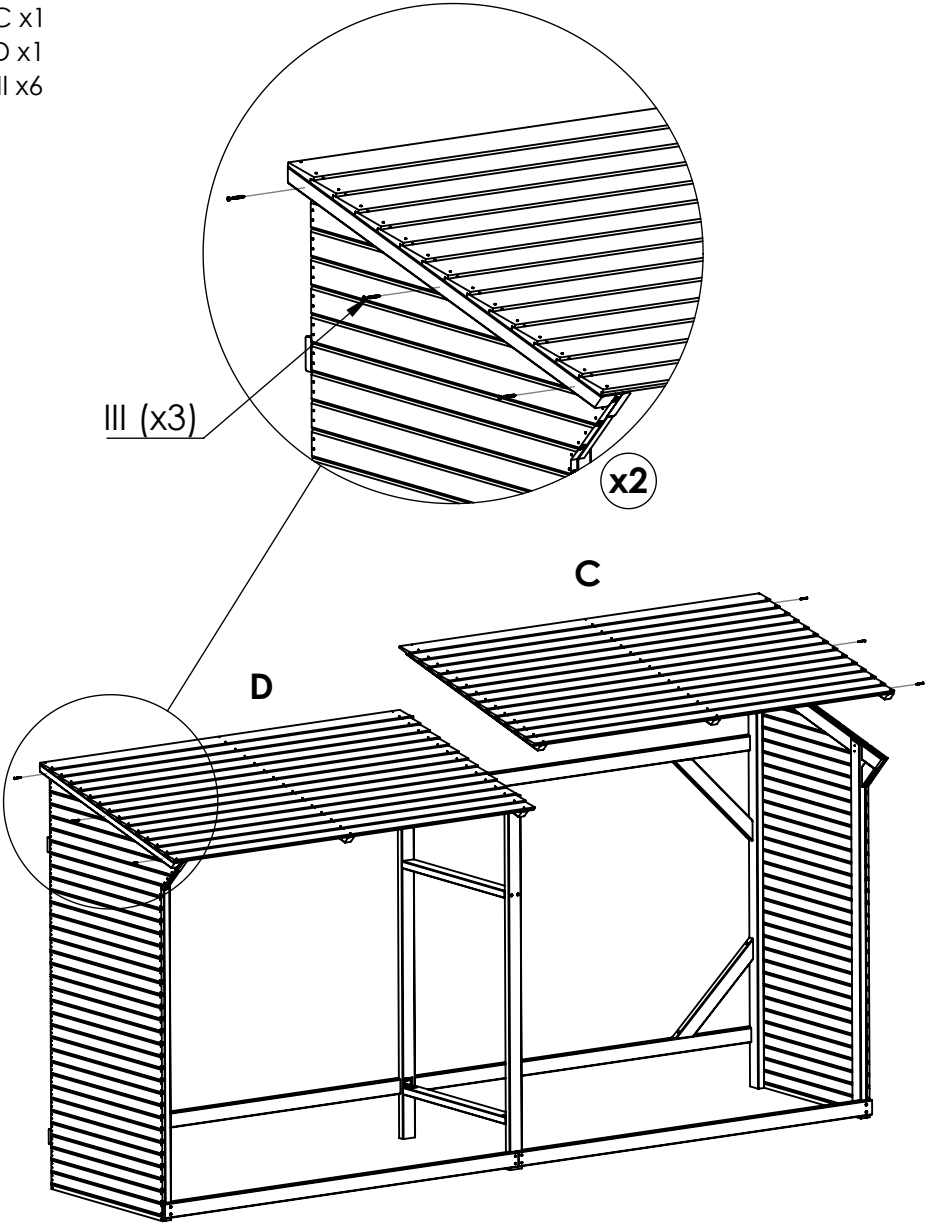

9/11


II x4

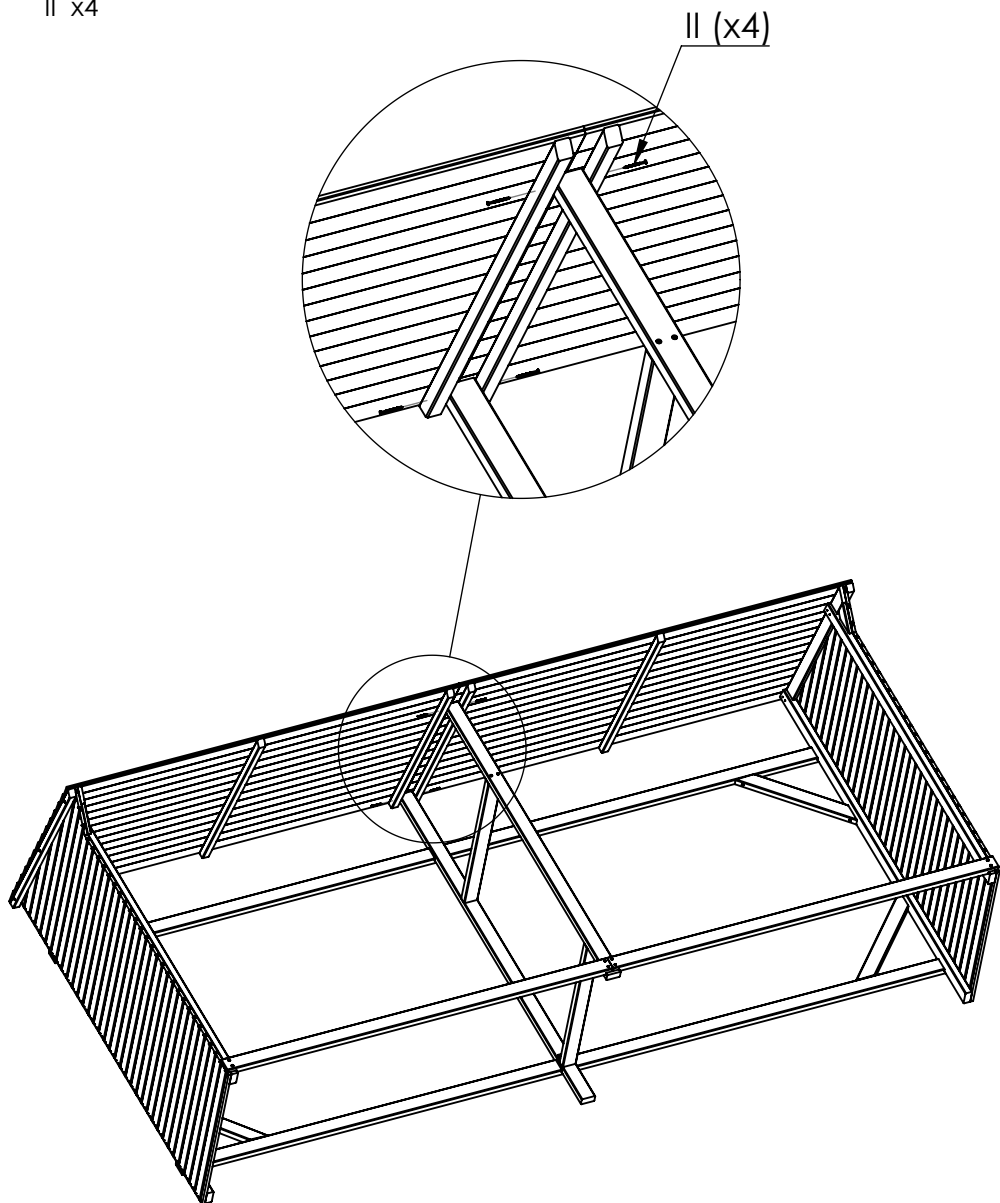

10/11

G x4

III x12

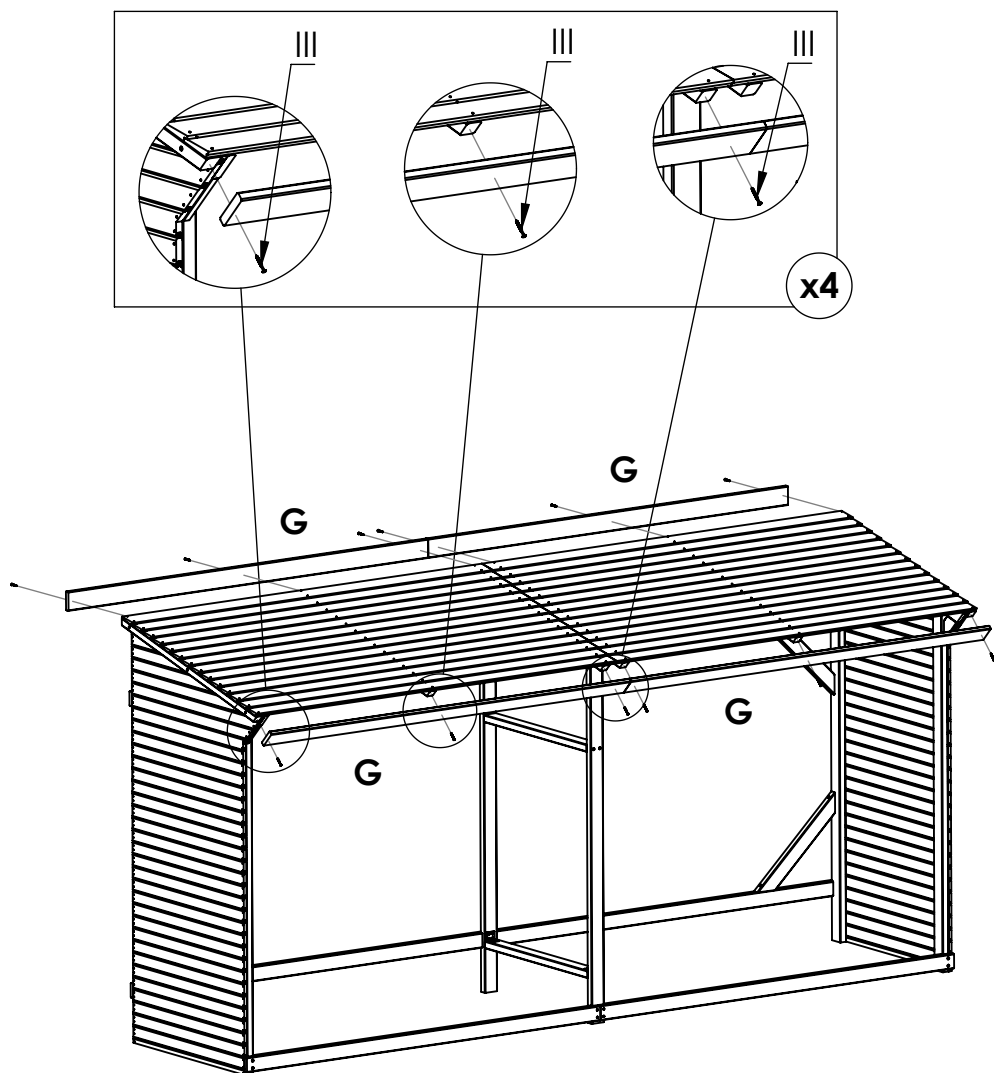

11/11

H x2

III x6

III (x3)

x2

H

H

